

Rinnai

Operation / Installation Manual Commercial Solar Pre-Heat Systems



WARNING

The appliance must be installed, commissioned and serviced by an authorised person in accordance with all applicable local rules and regulations.

The collector flow and return pipes should be copper tube or alternative tube supplied by Rinnai.



WARNING

Plastic pipe must not be used. Plastic pipe is not suited to the high water temperatures and pressures that may occur in the collector flow and return system.

NOT SUITABLE AS A POOL OR SPACE HEATER



The Australian Gas Association
All Rinnai gas products
are A.G.A. certified.



N10378

Certified Product



Certified Product



Part No. 15401005

TABLE OF CONTENTS

IMPORTANT INFORMATION & WARNINGS	1
SAFETY & REGULATORY INFORMATION	1
SCALDS HAZARDS	2
SAFETY DEVICES	3
EXCESSIVE DISCHARGE FROM SAFETY DEVICES	3
HYDROGEN GAS	3
WATER TEMPERATURE	4
WATER QUALITY	4
DRAINING AND FILLING THE SYSTEM	4
SERVICING AND REPAIR	4
INSTALLATION AND MAINTENANCE INFORMATION	5
REGULATIONS AND OCCUPATIONAL HEALTH AND SAFETY (OH&S)	5
LOCATION - GENERAL INFORMATION	5
STORAGE CYLINDER LOCATION	5
WATER PIPES	5
WATER SUPPLY	5
HOT WATER DELIVERY TEMPERATURE	6
VALVES AND FITTINGS	6
INSTALLATION PROCEDURE	7
START UP/RUNNING STATE	8
SYSTEM INSTALLATION	8
INSTALLATION INFORMATION	9
SOLAR COLLECTOR SPECIFICATIONS	9
SYSTEM ORIENTATION AND INCLINATION	9
SOLAR COLLECTOR MOUNTING OPTIONS	10
PIPE AND PUMP SIZING	10
SOLAR COLLECTOR INSTALLATION COMPONENTS	11
INSTALLATION - FLAT ROOF FRAME	12
COLLECTOR MOUNTING PRE ASSEMBLY FOR A NON FRAMED INSTALLATION	12
STANDARD INSTALLATION - TILED ROOF	13
COLLECTOR SPACING REQUIREMENTS	15
FLOW AND RETURN LINE LAYOUT	16
COLLECTOR FITTING DETAILS ENDURO OR EQUINOX COLLECTORS	17
COLLECTOR FITTING DETAILS E-FROST COLLECTORS	18
SOLAR STORAGE CYLINDER SPECIFICATIONS	19
COMPONENTS SUPPLIED WITH CYLINDERS	19
STORAGE CYLINDERS DIMENSIONS	20
COMPONENTS SUPPLIED IN DD SOLAR CONTROL KITS	22
INSTALLATION OF SOLAR CONTROLLER & PUMP	22
INSTALLATION OF SOLAR CONTROLLERS	23
SOLAR CONTROLLER	23
ERROR DETECTION	23
SOLAR CONTROLLER COMPONENTS	23
PUMP CONFIGURATION	24
DIPSWITCH SETTINGS FOR FROST PROTECTION	25
RESISTANCE OF TEMPERATURE SENSOR LEADS	25
SOLAR PREHEAT WITH DEMAND DUO	26
SOLAR PREHEAT WITH MANIFOLD PACK	27
INSTALLATION OF GAS BOOSTING SYSTEM	28
SOLAR PREHEAT WITH MANIFOLD PACK	28
SAVE A SERVICE CALL	29

IMPORTANT INFORMATION & WARNINGS

SAFETY & REGULATORY INFORMATION



DO NOT operate this system before reading the manufacturers instructions.

This appliance must be installed, commissioned and serviced by an authorised person in accordance with all applicable local rules and regulations.

Access covers of water heating system components will expose 240V wiring and **MUST** be removed by an authorised person.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

For continued safety of this appliance it must be installed, operated and maintained in accordance with the manufacturers instructions.

Children should be supervised to ensure they **DO NOT** play with the appliance.

Any power leads from the water heater system components **MUST BE** plugged into an external weatherproof electrical outlet. If the power supply cord of any water heating components is damaged, it **MUST BE** replaced by an authorised person in order to avoid a hazard, using genuine replacement parts available from Rinnai. Take care not to touch the power plugs with wet hands.

Care should be taken not to touch the pipe work as it may be **HOT!** The pipes between the solar collectors and storage cylinder **MUST BE** copper, or alternative material pipes that may be supplied by Rinnai. Plastic pipe is **NOT** suited to the water temperatures and pressures that may occur in the system.

DO NOT place articles on or against this appliance.

DO NOT store chemicals or flammable materials near this appliance.

DO NOT operate with collectors or covers removed from this appliance.

DO NOT activate pump unless cylinder is full of water.

NEVER use a flammable spray such as hair spray, lacquer, paint, etc near this unit as this may cause a fire.

NOTICE TO VICTORIAN CONSUMERS

This appliance must be installed by a person licensed with the Plumbing Industry Commission.

Only a licensed person will have insurance protecting their workmanship.

So make sure you use a licensed person to install this appliance and ask for your Compliance Certificate.

For Further information contact the Plumbing Industry Commission on 1800 015 129.

IMPORTANT INFORMATION & WARNINGS

SCALDS HAZARDS



HOT WATER CAN CAUSE SCALDS.

CHILDREN, DISABLED, ELDERLY AND THE INFIRM ARE AT THE HIGHEST RISK OF BEING SCALDED.

FEEL WATER TEMPERATURE BEFORE BATHING OR SHOWERING.

SCALDS FROM HOT WATER TAPS CAN RESULT IN SEVERE INJURIES TO YOUNG CHILDREN.

SCALDS OCCUR WHEN CHILDREN ARE EXPOSED DIRECTLY TO HOT WATER WHEN THEY ARE PLACED INTO A BATH WHICH IS TOO HOT.

ALWAYS.....

Test the temperature of the water with your elbow before placing your child in the bath, also carefully feel water before bathing or showering yourself.

Supervise children whenever they are in the bathroom.

Make sure that the hot water tap is turned off tightly.

CONSIDER.....

Installing child proof tap covers or child resistant taps (both approaches will prevent a small hand being able to turn on the tap).

Installing tempering valves or thermostatic mixing valves which reduce the hot water temperature delivered to the taps. Your local plumbing authority may already require that these be fitted. Contact your installer or local plumbing authority if in doubt.

NEVER.....

Leave a toddler in the care of another child. They may not understand the need to have the water temperature set at a safe level.

IMPORTANT INFORMATION & WARNINGS

SAFETY DEVICES

The water heating system is supplied with various safety devices including temperature sensors, overheat sensors and switches and a Pressure & Temperature Relief (PTR) valve. These devices must not be tampered with or removed. The water heating system must not be operated unless each of these devices is fitted and is in working order.



DO NOT tamper with or remove safety devices.


DO NOT operate the water heater unless all safety devices are fitted and in working order.

DO NOT block or seal the PTR Valve and drain pipe.


Pressure & Temperature Relief (PTR) Valve

This valve is located near the top of the water heater and is essential for safe operation. It is normal for the valve to release a small quantity of water through the drain line during heating.

However, continuous leakage of water from the valve and its drain line may indicate a problem with the water heater.

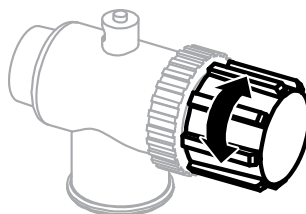

Twist cap until water flows from drain line

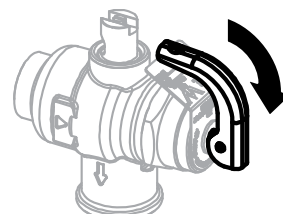

Lift lever until water flows from drain line
(Lower lever gently!)



Never block the outlet of the PTR valve or its drain line for any reason. The easing gear must be operated at least every 6 months to remove lime deposits and verify that it is not blocked. Failure to do this may result in the water heater failing.

If the valve does not discharge water when the easing gear lever is opened, or does not seal again when the easing gear is closed, attendance by an authorised person must be arranged without delay. The PTR valve is not serviceable.

EXCESSIVE DISCHARGE FROM SAFETY DEVICES

Pressure & Temperature Relief (PTR) Valve

It is normal and desirable that this valve allows a small quantity of water to be discharged during the heating cycle. If it discharges more than a bucket of water during a 24 hour period or discharges continuously there may be another problem.

If the valve dribbles continuously, try easing the valve gear for a few seconds as described above. This may dislodge any foreign matter and alleviate the problem.

If the valve discharges at high flows, especially at night, it may be as a result of the water pressure exceeding the design pressure of the water heater. Ask your installer to fit a Pressure Limiting Valve (PLV).



NEVER replace the PTR valve with one which has a higher pressure rating than is specified for your water heater.

Expansion Control Valve (ECV) - if fitted

It is normal and desirable that this valve allows a small quantity of water to be discharged during the heating cycle. If it discharges more than a bucket of water during a 24 hour period or discharges continuously there may be another problem.

If the valve leaks continuously, try easing the valve gear for a few seconds. This may dislodge any foreign matter and alleviate the problem. If this does not alleviate the problem contact Rinnai.

Operate the easing gear regularly to remove any lime deposits and to verify that it is not blocked.

HYDROGEN GAS

In the case of systems using a vitreous enamelled lined cylinder, if the hot water unit is not used for two weeks or more, a quantity of hydrogen gas, which is highly flammable, may accumulate in the water heater. To dissipate this safety, it is recommended that a non electrically operated hot tap be turned on for two minutes at a sink, basin, or bath, but not a dishwasher or other appliance. During this procedure there must be no smoking, open flame or any electrical appliance operating nearby. If hydrogen is discharged through the tap, it will probably make a sound like air escaping.

IMPORTANT INFORMATION & WARNINGS

WATER TEMPERATURE

The solar control unit and pump ensure water circulates between the solar collectors and storage cylinder until the water at the base of the cylinder reaches approximately 65°C. Under these conditions water at the hot outlet may exceed 85°C. During periods of low solar gain supplementary heating occurs to a minimum of 60°C as required.



To meet Australian regulatory requirements, supplementary heating temperature settings must be at least 60°C.

WATER QUALITY

The water quality of most public supplies is suitable for the water heating system. The water quality from bore wells is generally unsuitable for the water heating system. Refer to separate 'Warranty Terms and Conditions' document for water quality parameters and how they affect the warranty conditions. If in doubt about the water quality, have it checked against the parameters listed in the warranty conditions. The system is not suitable as a pool or spa heater.

DRAINING AND FILLING THE SYSTEM

Draining or filling normally occurs only during installation or servicing and must be carried out by an authorised person.

MAINTENANCE AND REGULAR CARE

Operate the easing gear of the PTR and ECV (if fitted) as described in the section 'Safety Devices' on page 5.

SERVICING AND REPAIR

Our Servicing network personnel are fully trained and equipped to give the best service on your appliance. If your appliance needs service, ring one of the service contact numbers on the back of this booklet.

It is recommended that the system be serviced at least every 5 years.

The pressure and temperature relief valve and expansion control valve must be checked for performance or replaced by an authorised person at intervals not exceeding 5 years or more frequently in areas where the water is classified as scaling water (refer to 'Warranty Terms and Conditions' document - 'Water Quality').

It is recommended that the sacrificial anode fitted to Sunmaster Vitreous Enamel cylinders are inspected every 5 years or more frequently in areas where there is a high incidence of water deposits. This does not apply to DDS stainless steel cylinders. Anodes suited to hard and soft water are available from Rinnai.

If the electric conduit, power supply cord or plug to the water heater is damaged, they must be replaced by an authorised person in order to avoid a hazard. The power supply cord and plug (if fitted) must be replaced by a genuine replacement part available from Rinnai.

INSTALLATION AND MAINTENANCE INFORMATION

REGULATIONS AND OCCUPATIONAL HEALTH AND SAFETY (OH&S)



Installation and commissioning must be performed by authorised persons.

Rinnai solar systems must be installed in accordance with these instructions and all regulatory requirements which exist in your area including those in relation to manual lifting, working at heights and on roofs. Applicable publications and regulations may include:

- AS/NZS 5601 Gas Installations
- AS/NZS 3500 National Plumbing and Drainage
- AS/NZS 3000 Wiring rules
- Building Codes of Australia (BCA)
- Local Occupational Health and Safety (OH&S) regulations

This appliance is not suitable for use as a domestic spa pool or swimming pool heater.

Solar collectors and cylinders are heavy and bulky items and are usually positioned on the roofs of buildings. Australian State and Territories have a principal Occupational Health and Safety (OH&S) Act which contains requirements relating to the handling of large, bulky or awkward items and the prevention of falls from elevated surfaces. Persons installing solar collectors must be aware of their responsibilities and be adequately trained and qualified, in accordance with local OH&S requirements.

LOCATION - GENERAL INFORMATION

All system components must be in an accessible location. The storage cylinder must be accessible without the use of a ladder or scaffold. Sufficient clearances shall allow access to, and removal of, all serviceable parts. Ensure the PTR valve, pump kit, and drain lines have sufficient clearances and are accessible for service and removal. The information on any data plates must also be readable. In the case of vitreous enamel lined cylinders, leave a clearance of the height of one storage cylinder above the cylinder being installed so the sacrificial anode can be inspected and replaced. This does not apply to stainless steel cylinders.

Select suitable areas of roof on which to install the solar collectors as close as practicable to the cylinder. Ensure that the area is even and without cracked or damaged tiles. Collectors should be positioned for optimum solar benefit. Refer to the section 'Installation of Solar Collectors' on page 12 for more information.

The solar controller requires an AC 240V power supply. A weatherproof 240 V power point must be supplied adjacent to this.

STORAGE CYLINDER LOCATION

The solar storage cylinders have an ingress protection rating of IPX4 making them suitable for internal or external installation. Rinnai 'external' gas boosters are suitable for external installation only.

Storage cylinders must be installed in freestanding mode on a level and stable base. For external installations, storage cylinders should be mounted on a concrete base at least 50mm thick or on well seasoned, evenly spread hardwood slats with a thickness of at least 25mm. Where property damage can occur, storage cylinders should be installed with an approved safe tray (overflow tray).

Ensure the cylinder does not stand on wet surfaces.

WATER PIPES

All hot water pipework should be insulated with sealed Polyethylene foamed or equivalent insulation to optimise performance and energy efficiency. Such insulation may also be mandatory under local regulations. With the exception of solar collector flow and return pipes, water pipe sizing should be performed in accordance with AS/NZS 3500.

WATER SUPPLY

The minimum and maximum water pressures for the various systems are listed on page 22. Approved pressure limiting valves may be required if the 'Maximum' rated water supply pressures are exceeded. For gas boosted systems to achieve the rated flow through the outlet of the continuous flow water heater, the minimum water supply pressures must be supplied. The systems will operate at lower pressures but the rated flow will not be achieved.

Water chemistry and impurity limits are detailed in the separate Warranty document. Most metropolitan water supplies fall within these requirements. If you are unsure about water quality, contact your water authority. If sludge or foreign matter is present in the water supply, a suitable filter should be incorporated in the water supply to the storage cylinder.

INSTALLATION AND MAINTENANCE INFORMATION

HOT WATER DELIVERY TEMPERATURE

Local regulations and/or the requirements of AS/NZS3500.4 must be considered regarding the temperature limitations of hot water supplied to areas used primarily for personal hygiene. The temperature of water to these areas is limited to 45°C for early childhood centres, primary and secondary schools and nursing homes or similar facilities for young, aged, sick or people with disabilities and 50°C for all other buildings. To comply with these requirements, a temperature limiting device, such as a thermostatic mixing or tempering valve, will be required on all solar hot water systems.

VALVES AND FITTINGS

The following valves and fittings are supplied with your solar hot water system:

- A combined pressure and temperature (PTR) relief valve, capacity 10 kW. Relief valve pressure settings vary with models. This valve is fitted at the top of the storage cylinder.
- The PTR valve is a safety device and it is mandatory that it is fitted by the installer in all installations.
- Fittings as shown in the tables on pages 11, 19 and 22.

The following valves & fittings are to be supplied by the installer:

- A cold water expansion control valve (ECV). An ECV must be fitted in Western Australia and South Australia to the cold water supply to the storage cylinder to comply with local regulations. An ECV is recommended in all other geographical areas where the water supply has a tendency to cause scaling. This will reduce hot water discharge from the Pressure and Temperature Relief (PTR) valve which minimises wear on this valve.
- A stop cock, non return valve and line strainer. Combination valves incorporating two or more of these functions (such as 'Trio' valves) are suitable. These are fitted to the cold water supply to the storage cylinder by the installer.
- Cold water supply and hot water discharge pipework to and from the storage cylinder.
- Solar collector flow and return pipes and storage cylinder connections.
- An isolating valve and connection union for the gas supply to the gas booster.
- An approved pressure limiting valve is required if the maximum rated water supply pressure in the table on page 19 is exceeded.

INSTALLATION PROCEDURE

1. Install Solar Collectors

Position and install collectors in accordance with the section "INSTALLATION OF SOLAR COLLECTORS" on page 12.

2. Position Storage Cylinders

Position storage cylinders on a level base.

3. Connect PTR Valves

Connect PTR valves in the location shown on the diagrams shown on pages 20 and 21.

- Leave the valve body pointing down. Tighten the valve using the spanner flats - never use the valve body.
- The PTR must be adequate for the load being applied to the storage cylinder. As any gas boosting is done after the storage cylinders the only heat input to the tank is from the solar collectors. The potential solar output for the solar collectors at PTR relief conditions is listed on page 9.

Example: if each tank has 3 Enduro solar collectors, then the maximum input is $3 \times 1.25 \text{ kW} = 3.75 \text{ kW}$. This is less than the 10kW capacity of the supplied PTR valve and therefore is OK.

- Use Teflon tape on the valve. Never use hemp or other sealing materials. Ensure the tape does not protrude past the end of the thread, which could result in it blocking the water passage from the valve.

4. Connect Flow and Return Pipework

Connect the flow and return pipework as shown in the diagrams on page 15, or using a suitable alternative layout that ensures the flow and return piping is balanced.

5. Connect Pump and other Pipework

Connect the pump, pipework between collectors and cylinders, cold inlet, hot outlet and remaining pipework and gas boosting choice as shown in the relevant diagram on pages 15 and 26, or other suitable layout.

6. Connect the Solar Controller

With power off, remove the clear cover on the solar controller. Mount the control using screws in the mounting points shown in the picture. DO not supply power to the solar controller until the system is filled with water.

7. Connect Temperature Sensor Leads

Connect temperature sensor leads as shown on page 18 and 25. Ensure the leads are protected from sunlight. The sensors must be sealed in place with thermoplastic putty or silicon.

It is important that these leads are installed as specified. Failure to do so will lead to malfunction or lack of hot water.

8. Fill the System

Ensuring the power supply to the pump is off; turn on a hot water outlet tap(s). Remove the screw from the pump to allow air to bleed out. Open the stop cock in the cold water mains supply line. The entire system will fill with cold water. Once the pump is no longer bleeding air, replace the screw and continue to bleed the air through the taps. Air will be displaced through the tap and some air needs to be bled off using the air bleed valve on the collector near the hot sensor lead.

Turn off the hot tap at the sink when water flows freely without air bubbles or air bursts.

9. Adjust Pump Speed

Adjust the pump to the speed specified on page 10.

10. Check for Leaks

Check all connections for leakage and tighten if necessary. This is especially important for all fittings in positions not easily accessed such as near the solar collectors. Operate the easing gear of both PTR and ECV valve at the storage cylinders to ensure these valves are functional.



If leaks are detected the system must be drained and leaks repaired before the system is refilled. If this is necessary, cover the solar collectors with packaging cardboard or a tarp to prevent them from heating which could result in steam or hot water being discharged from fittings.

SYSTEM INSTALLATION

11. Adjust Dip Switches

With the power OFF to the solar controller, adjust all the dip switches using the guide shown on page 25 to achieve desired pump configuration and frost protection.

Frost protection MUST be enabled for systems using E-Frost collectors to comply with warranty conditions.



Never adjust Dip Switch settings with the power 'ON'.

12. Replace Cover of Solar Controller

13. Connect Power and Check Display

Connect the 240 V power and observe the control display. Check that the display reflects the dipswitch settings.

START UP/RUNNING STATE

- Line one on the display will show the temperature of the cold sensor (in storage cylinder.) and the hot sensor (on the collector).
- Line two on the display will scroll through the following:
 - Software version
 - Maximum tank temperature set point
 - Pump configuration and operation
 - Pump errors and accumulative error times
 - Pump 1 accumulative run hours
 - Pump 2 accumulative run hours
 - Run hours since last reset
- The control then switches the circulation pump in response to the temperature differential between the solar collector and storage cylinder temperature sensors. The pump has a maximum run time of approximately 10 minutes and then it stops for approximately 8 seconds to clear any air locks. It then restarts if conditions require.
- If frost protection is enabled, and the collector temperature falls below 4°C, the control will switch the pump on to circulate water through the collectors. When the collector temperature reaches 8°C the control switches the pump off.
- Frost Protection must be enabled when using E-Frost Collectors (See page 25).

14. Finishing the Installation

Ensure that the set temperature on the gas boosting (Demand Duo or Manifold Pack) is set to 60°C or above.

Ensure that the delivered temperature of the water to the building complies with all relevant regulations.

INSTALLATION INFORMATION


SOLAR COLLECTOR SPECIFICATIONS

	Enduro / Equinox (SP200A or SP200A FTC)	E-Frost
Type	Flat Plate	Flat Plate / Heat Pipe
Construction		
Waterways	Copper	Copper
Absorber	Aluminium	Aluminium
Casing Material	Aluminium	Aluminium
Selective Surface	High Performance	High Performance
Maximum Operating Pressure (kPa)	850	850
Overall Dimensions (mm)	1940 x 1025 80	1940 x 1025 80
Empty Weight (Kg)	33 Std 35 FTC	34
Water Volume (Litres)	1.3	0.6
Number of Risers	8	10
Potential Solar Output at PTR Relief Conditions (kW)	1.25	1.25
Frost Protection	Std - No Frost Protection * FTC - Frost Protection to -6°C *	Frost Protection to -12°C *
	* FOR MORE INFORMATION ON FROST PROTECTION REFER TO WARRANTY BOOKLET	

SYSTEM ORIENTATION AND INCLINATION


The performance of any solar hot water system is determined by the way that the system is installed.

In Australia, the solar collectors should face the equator (North) as shown below. Where this orientation is not practical, collectors facing within 45 degrees from North (between North-East and North-West) area acceptable, with a reduction in efficiency of approximately 5%. If the bulk of hot water consumption occurs before 2 pm face the collectors in a North - Easterly direction. If the bulk of hot water consumption occurs after 2 pm face the collectors in a North - Westerly direction.

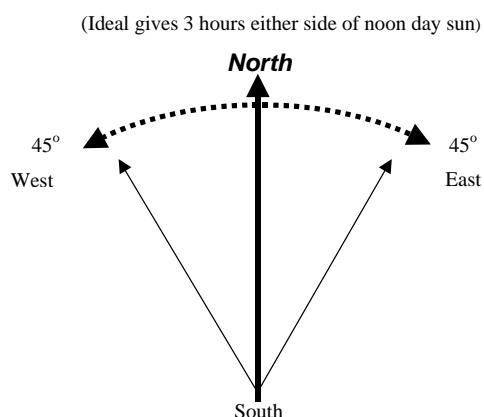

INSTALLATION OF SOLAR COLLECTORS

The inclination of the solar collectors should ideally be the same as the latitude angle of the site. Inclinations within 20 degrees of the latitude angle of the site are acceptable, with a reduction in efficiency of approximately 5%.

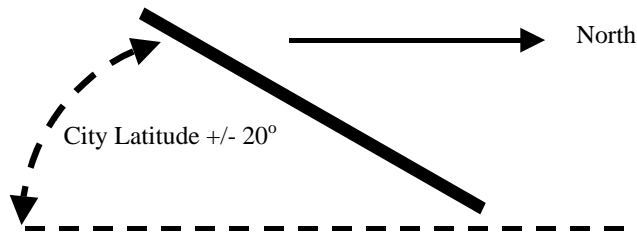

Note: Max 30° incline for Close Coupled systems due to cylinder over balancing


Latitudes of Australian Cities

City	Latitude	City	Latitude	City	Latitude	City	Latitude
Adelaide	35°S	Cairns	17°S	Hobart	42°S	Port Hedland	20°S
Alice Springs	24°S	Canberra	35°S	Mildura	34°S	Rockhampton	24°S
Brisbane	27°S	Darwin	12°S	Melbourne	38°S	Sydney	34°S
Broken Hill	31°S	Geraldton	28°S	Perth	32°S	Townsville	19°S



It is the responsibility of the installer to ensure the collector orientation and inclination comply with any local requirements.

SOLAR COLLECTOR MOUNTING OPTIONS

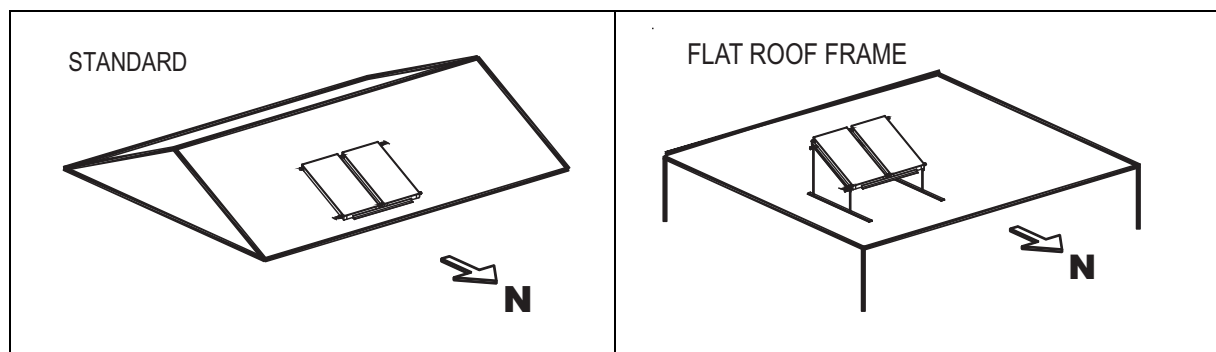

PIPE AND PUMP SIZING




 









Ensure that the combined length of flow and return piping for each collector set is approximately the same. This will result in even flow to all collectors and optimise performance.

PIPE AND PUMP SIZING CHART - COMMERCIAL ARRAYS											
Total collectors in array	Up to	10	20	30	40	50	60	70	80	90	100
Pipe sizing for solar flow and return manifolds		DN20	DN20	DN25	DN32	DN32	DN32	DN40	DN40	DN40	DN50
Pump		20-60N	20-60N	20-60N	25-80N	25-80N	25-80N	25-80N	25-80N	25-80N	25-80N
	Maximum pipe run in collector circuit (m)										
Pump speed	1	30	-	-							
	2	60	40	20							
	3	100	100	100	100	100	100	100	100	100	100

 INSTALLATION OF SOLAR COLLECTORS

SOLAR COLLECTOR INSTALLATION COMPONENTS

(supplied in Collector Installation kit)


KIT PART NUMBERS					
2 collectors – DDSP2			3 collectors – DDSP3		
Number of Collectors			Number of Collectors		
2	3		2	3	
2	-	 Mounting Rail Medium 14201197	2	2	 Stop End (1 x plug 3/4G (Kinco) + 1 x 3/4 Kinco nut and olive) (Not used with E-Frost Collector) 28801025
-	2	 Mounting Rail Large 14201198			
4	6	 Collector Mounting Strap (supplied with collectors) 12401012	2	4	 Compression Union 3/4 - 3/4 (1 x Nipple G3/4 (Kinco) + 2 x 3/4 Kinco nut and olive) (Half of these not used with E-Frost Collector) 32201709
4	4	 M8 Bolt, Washer and Nut (used to bolt collector mounting strap to mounting rail) BOLT 22601052 WASHER 17401072 NUT 16801062	2	2	 Compression Union 3/4 - 1/2 (1 x Nipple G3/4 (Kinco) + 1 x 3/4 Kinco nut and olive + 1 x 1/2 Kinco nut and olive) 33201711
8	12	 Collector Retainer 26601706			
8	12	 M6 Bolt, Washer and Nut (used with collector retainers) BOLT 22601073 WASHER 17401073 NUT 16801007	1	1	 Kinco Nut 1/2 16801012
			1	1	 Kinco Olive 1/2 33001012

INSTALLATION OF SOLAR COLLECTORS

INSTALLATION - FLAT ROOF FRAME



This installation is not suitable for use in cyclonic areas. For further details, please contact your local Rinnai Solar distributor.

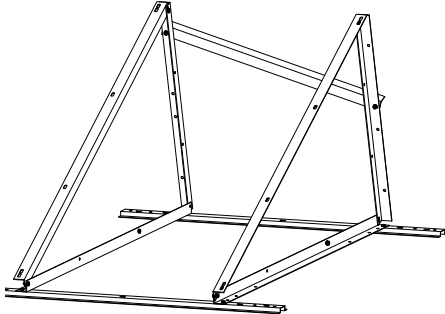




Assemble and install the frame as described in "Installation Manual for Roof Frames for use with Rinnai Solar Hot Water Systems".

COLLECTOR MOUNTING PRE ASSEMBLY FOR A NON FRAMED INSTALLATION



This installation is not suitable for use in cyclonic areas. For further details, please contact your local Rinnai Solar distributor.

- Assemble the collector rail components as shown in the diagram below.
- Only loosely attach the collector retainers to the rails.

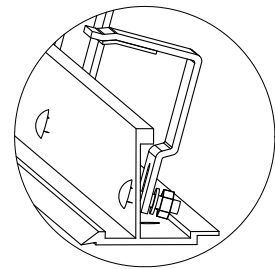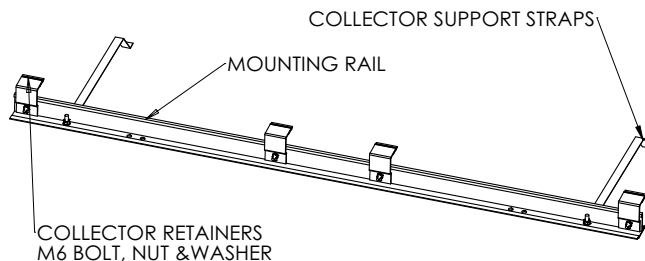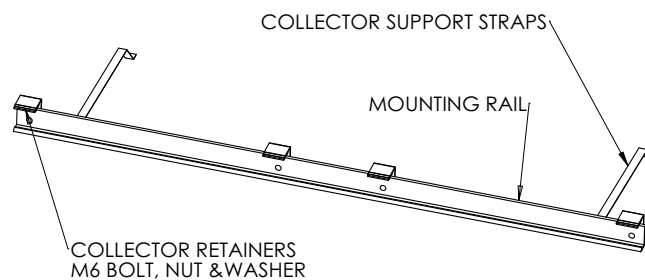


INSTALLATION OF SOLAR COLLECTORS

STANDARD INSTALLATION - TILED ROOF




This installation is not suitable for use in cyclonic areas. For further details, please contact your local Rinnai Solar distributor.


- Position the lower collector mounting rail assembly so that the rail is angled to ensure the collectors have an 8 mm / collector rise.
- Attach the collector mounting straps to the rafter or truss under the tiles.

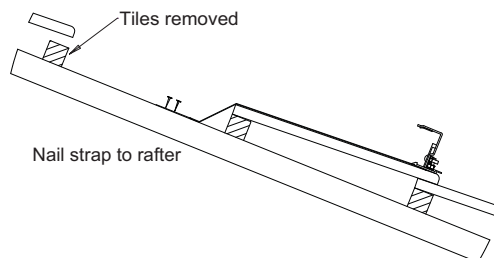


- Place the collector(s) onto the roof above the lower rail.
- If more than one collector is being installed then join them together using the compression fittings supplied.
- Push down on the collector retainers to clamp the collector and tighten the nuts.

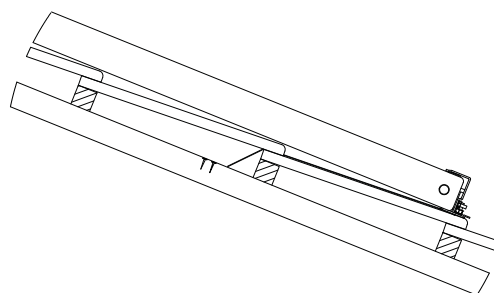

- Position the upper collector rail above the collectors. Push down on the retainers to clamp the collector and tighten the nuts.
- Attach the collector mounting straps to the rafter or truss under the tiles.

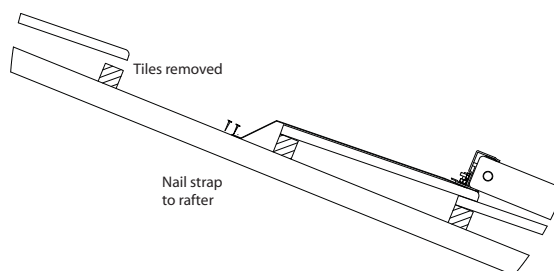

- Replace the tiles and ensure the collector is secure.

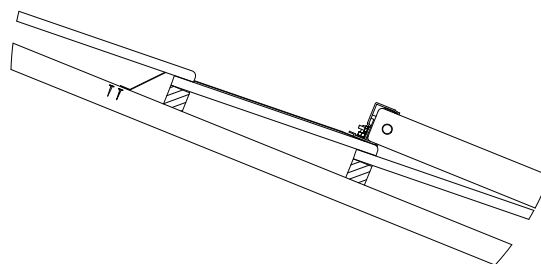


INSTALLATION OF SOLAR COLLECTORS

STANDARD INSTALLATION - TILED ROOF




This installation is not suitable for use in cyclonic areas. For further details, please contact your local Rinnai Solar distributor.


- Position the lower collector mounting rail assembly so that the rail is over the roof purlin and the rail is angled ensure the collectors have an 8 mm / collector rise.
- Drill through the roof iron and purlin using the holes in the rail as a guide. Apply some silicone sealant down the holes to ensure no water leakage.
- Bolt the rail to the roof purlin using a suitable fastener.

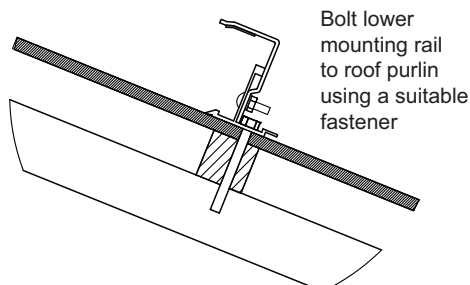

- Position the collector(s) onto the roof above the lower rail. If more than one collector is being installed, join them together using the compression fittings supplied.
- Push down on the collector retainers to clamp the collector and tighten the nuts.

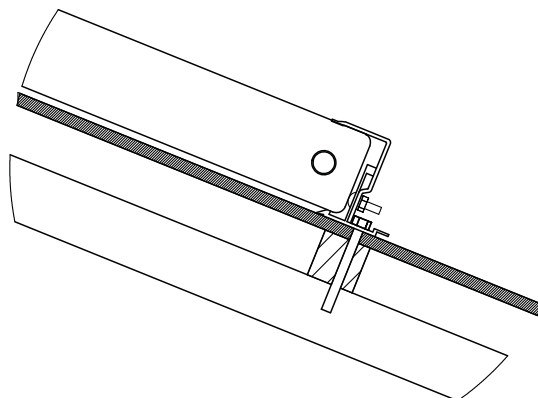


- Place the upper collector mounting rail above the collectors. Push down on the collector retainers to clamp the collector and tighten the nuts.
- Drill through the roof iron and purlin using the upper mounting rail as a guide. Apply some silicone sealant down the holes to ensure no water leakage and secure with suitable fasteners.

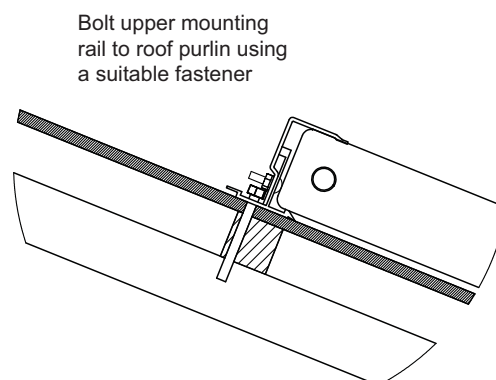


INSTALLATION OF SOLAR COLLECTORS

COLLECTOR SPACING REQUIREMENTS

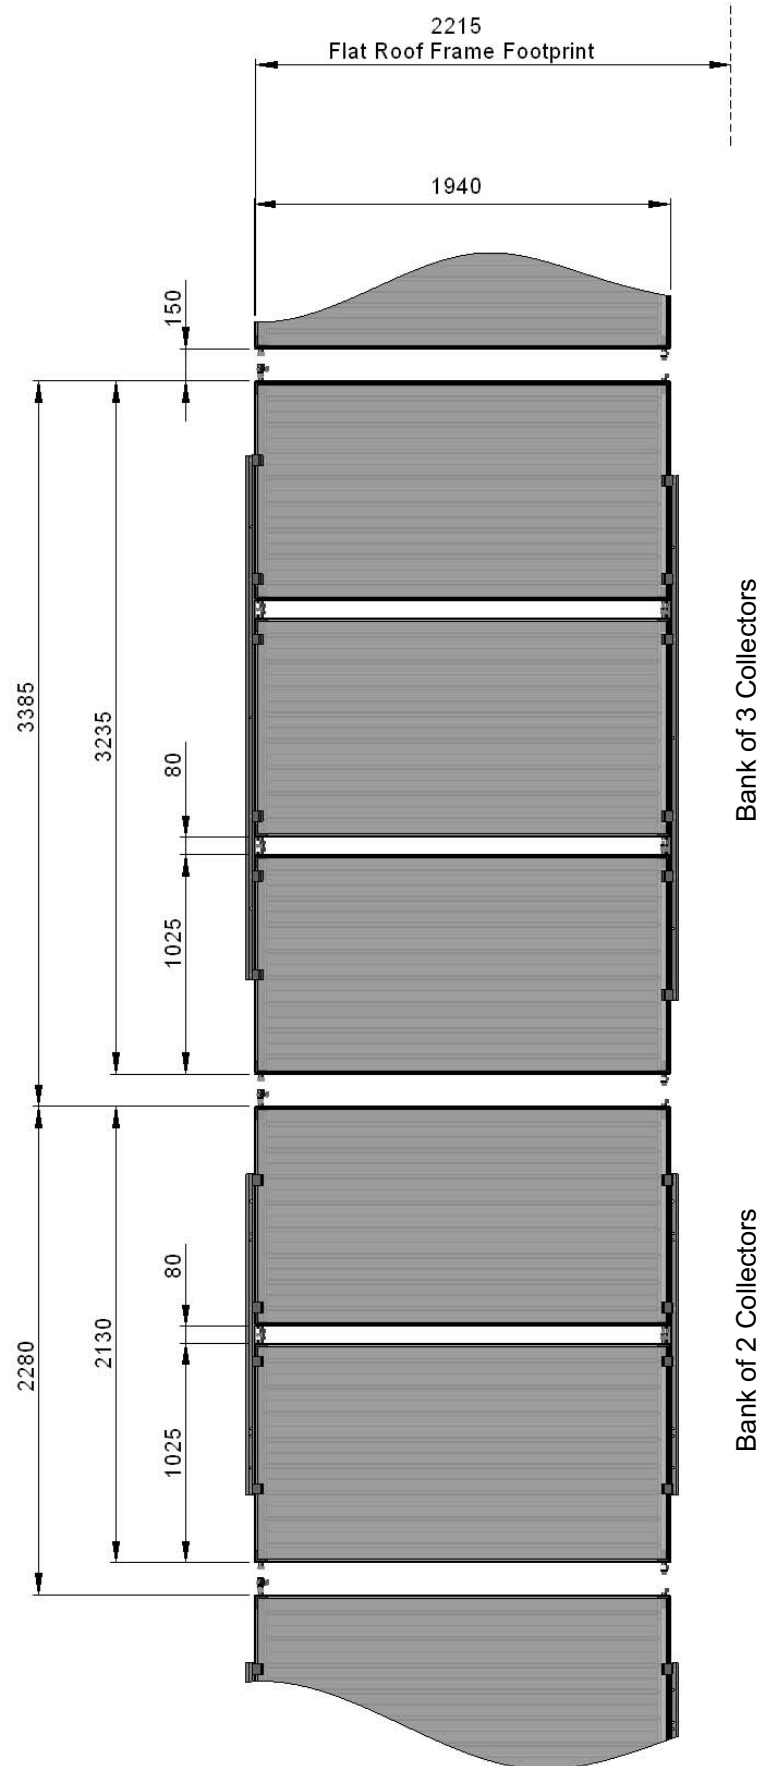


INSTALLATION OF SOLAR COLLECTORS

FLOW AND RETURN LINE LAYOUT

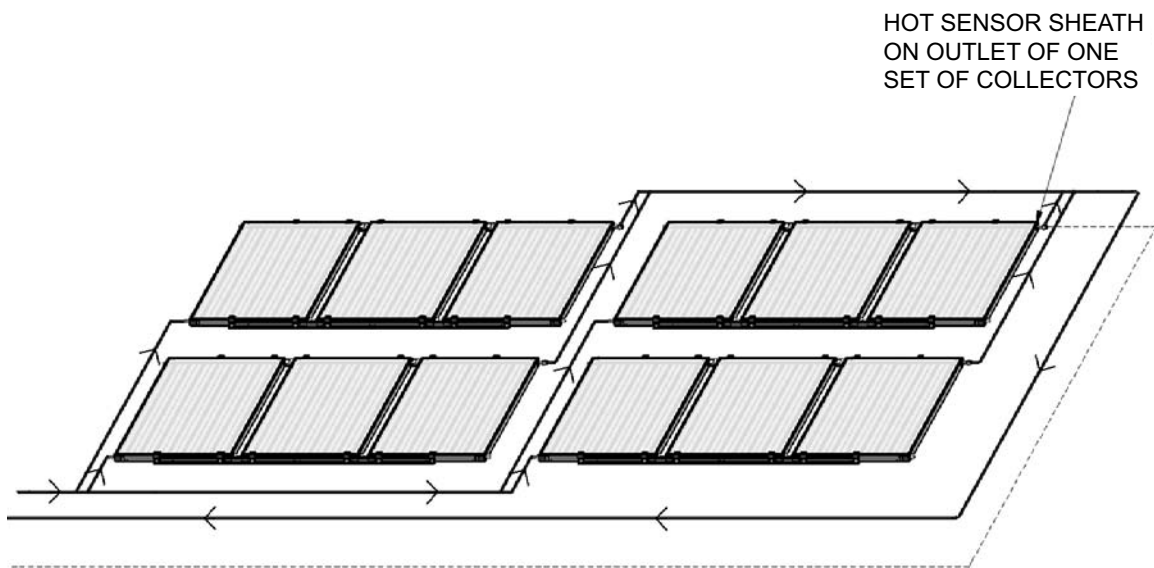


ENDURO AND EQUINOX COLLECTORS

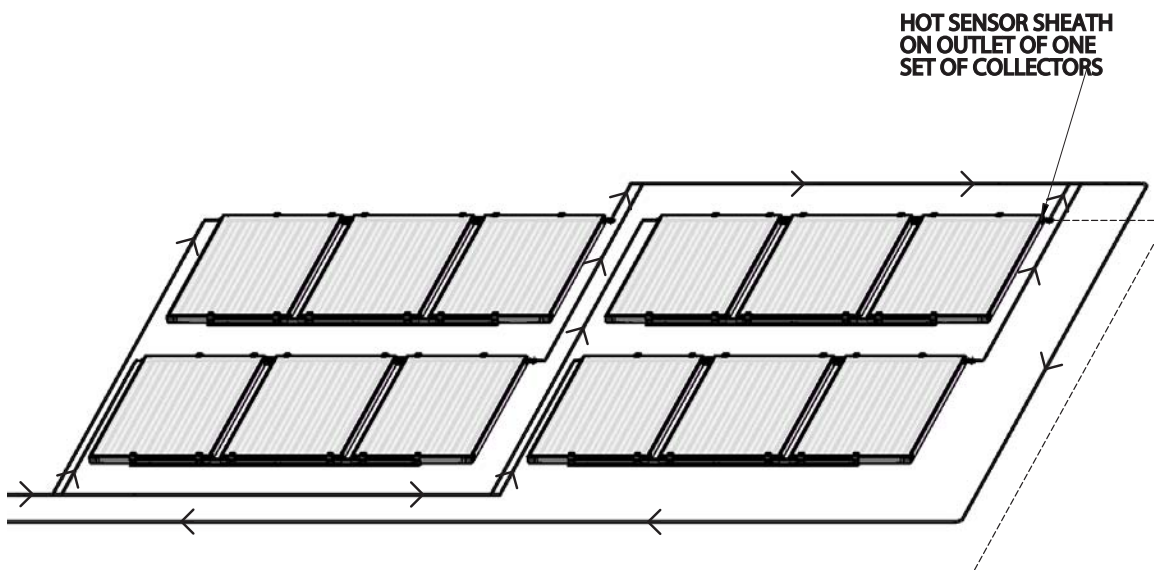

E-FROST COLLECTORS


INSTALLATION OF SOLAR COLLECTORS

COLLECTOR FITTING DETAILS ENDURO OR EQUINOX COLLECTORS

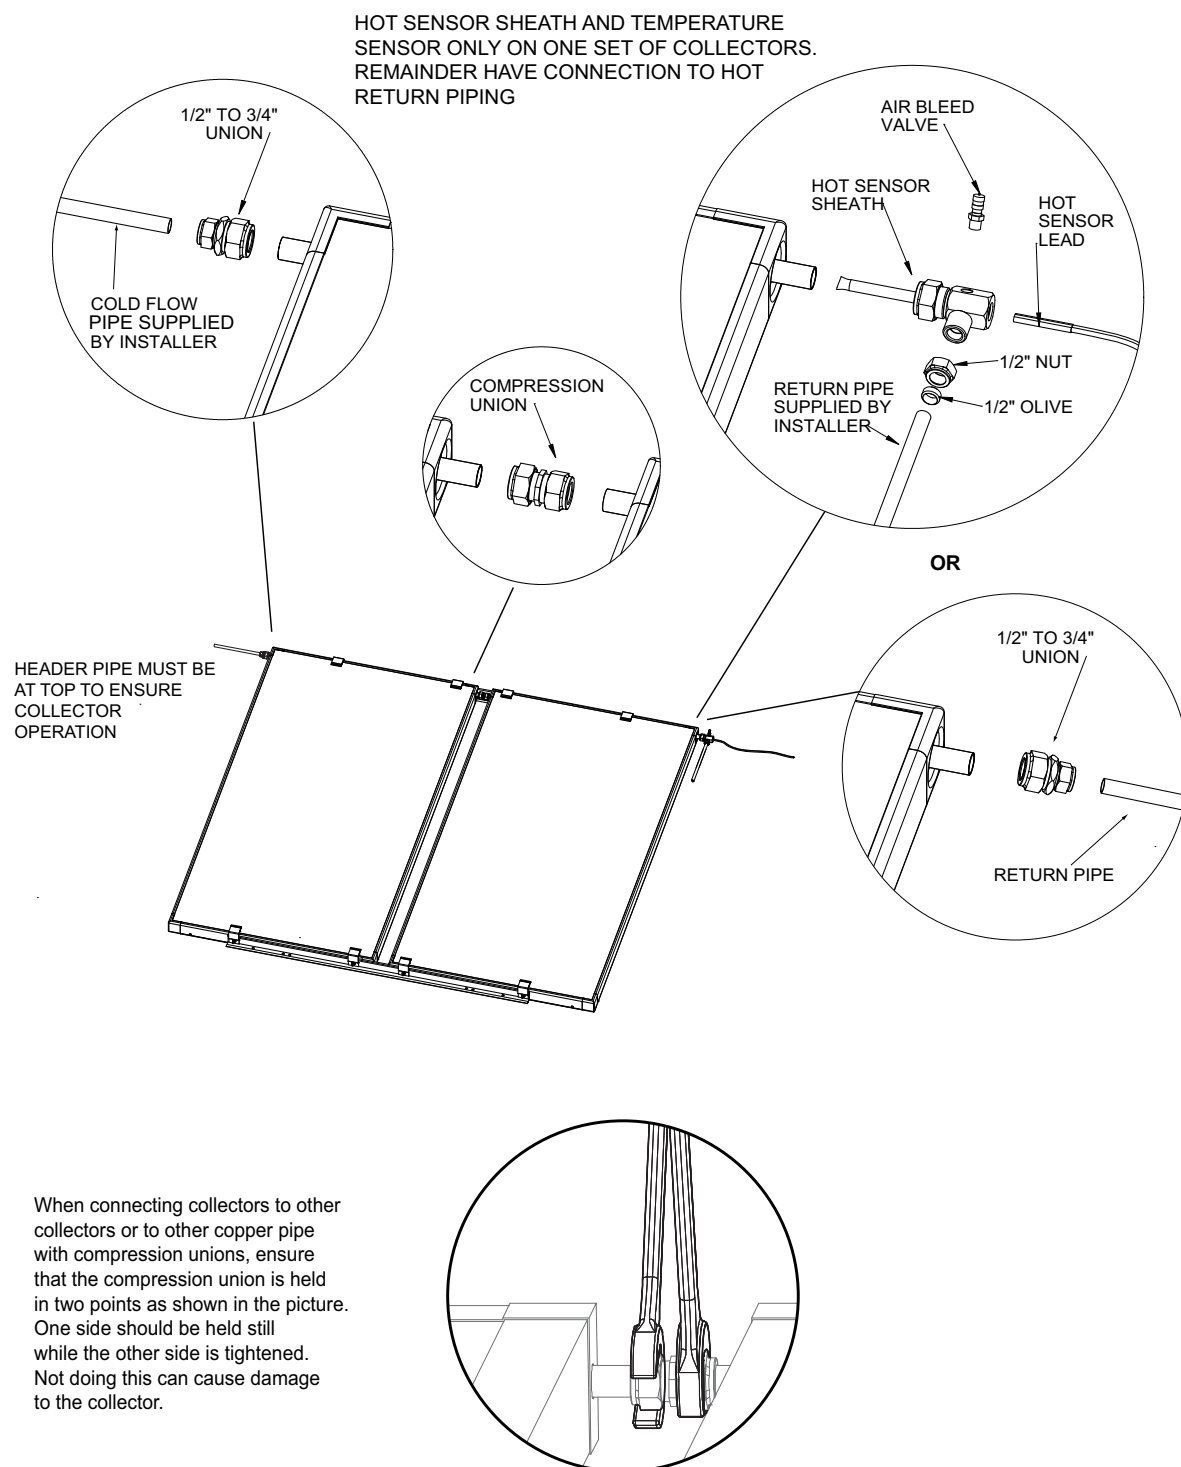

INSTALLATION OF SOLAR COLLECTORS

COLLECTOR FITTING DETAILS E-FROST COLLECTORS


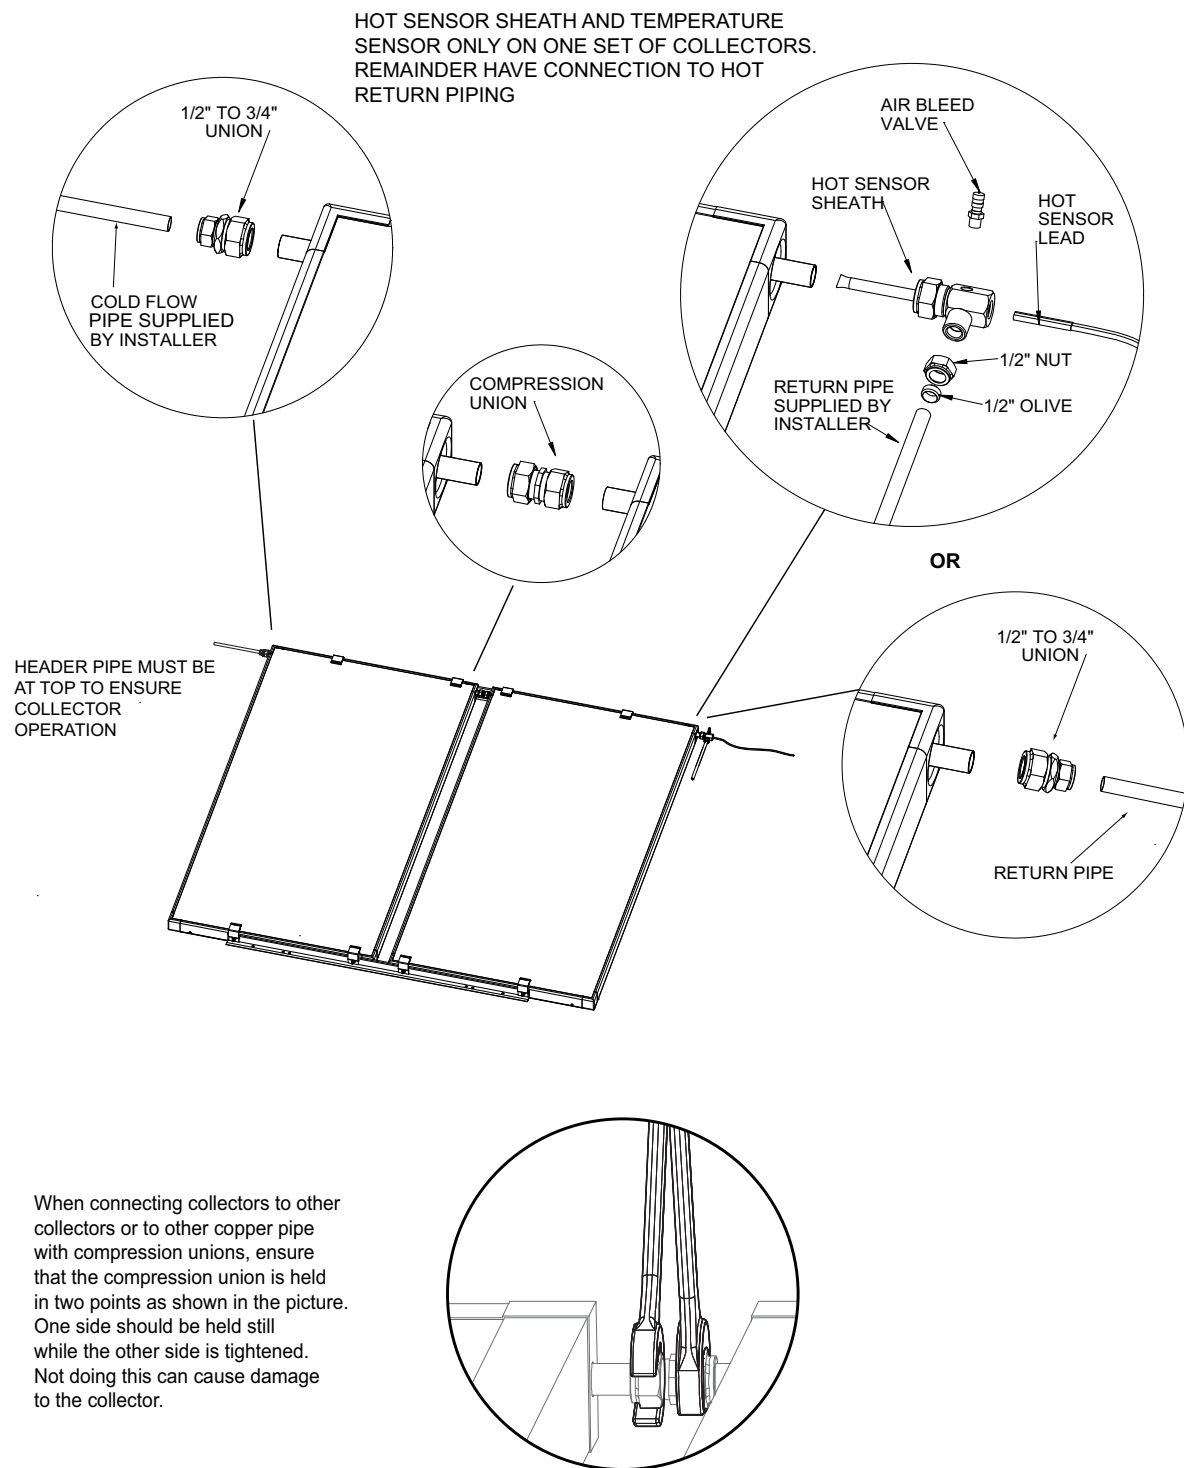








INSTALLATION OF SOLAR COLLECTORS

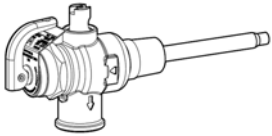 SOLAR STORAGE CYLINDER SPECIFICATIONS

	All Storage Cylinders
PTR setting (kPa)	850
Rating of PTR Valve (kW)	10
Expansion Control Valve (ECV) Setting (kPa) Supplied by Installer if required	700
Maximum supply pressure with ECV (kPa)	550
Maximum supply pressure without ECV (kPa)	680
Pressure Limiting Valve (kPa) Supplied by Installer if required.	500

COMPONENTS SUPPLIED WITH CYLINDERS


Items Supplied with Sunmaster (Vitreous Enamel) Cylinder		Items Supplied with DDS (Stainless Steel) Cylinder (DDSTK)	
1	 PTR Valve 92501192	1	 PTR Valve 11004784
1	 Adaptor R 3/4 x Rp 1/2	1	 Adaptor 3/4 R to 1/2 Rp 19801004
3	 Adaptor R 3/4 x Rp 3/4	1	 Nipple R 15 mm 17201021
		1	 1/2 Kinco Olive 33001012
		1	 1/2 Kinco Nut 16801012

INSTALLATION OF SOLAR COLLECTORS

STORAGE CYLINDERS DIMENSIONS

Vitreous Enamel Cylinders


	SG270	SG340
Cylinder Height (mm)	1265	1510
PTR / Hot Water Outlet (mm)	985	1200
Solar Return (mm)	700	700
Cold Water Inlet (mm)	260	260
Diameter (mm)	685	685
Weight Empty (Kg)	95	103

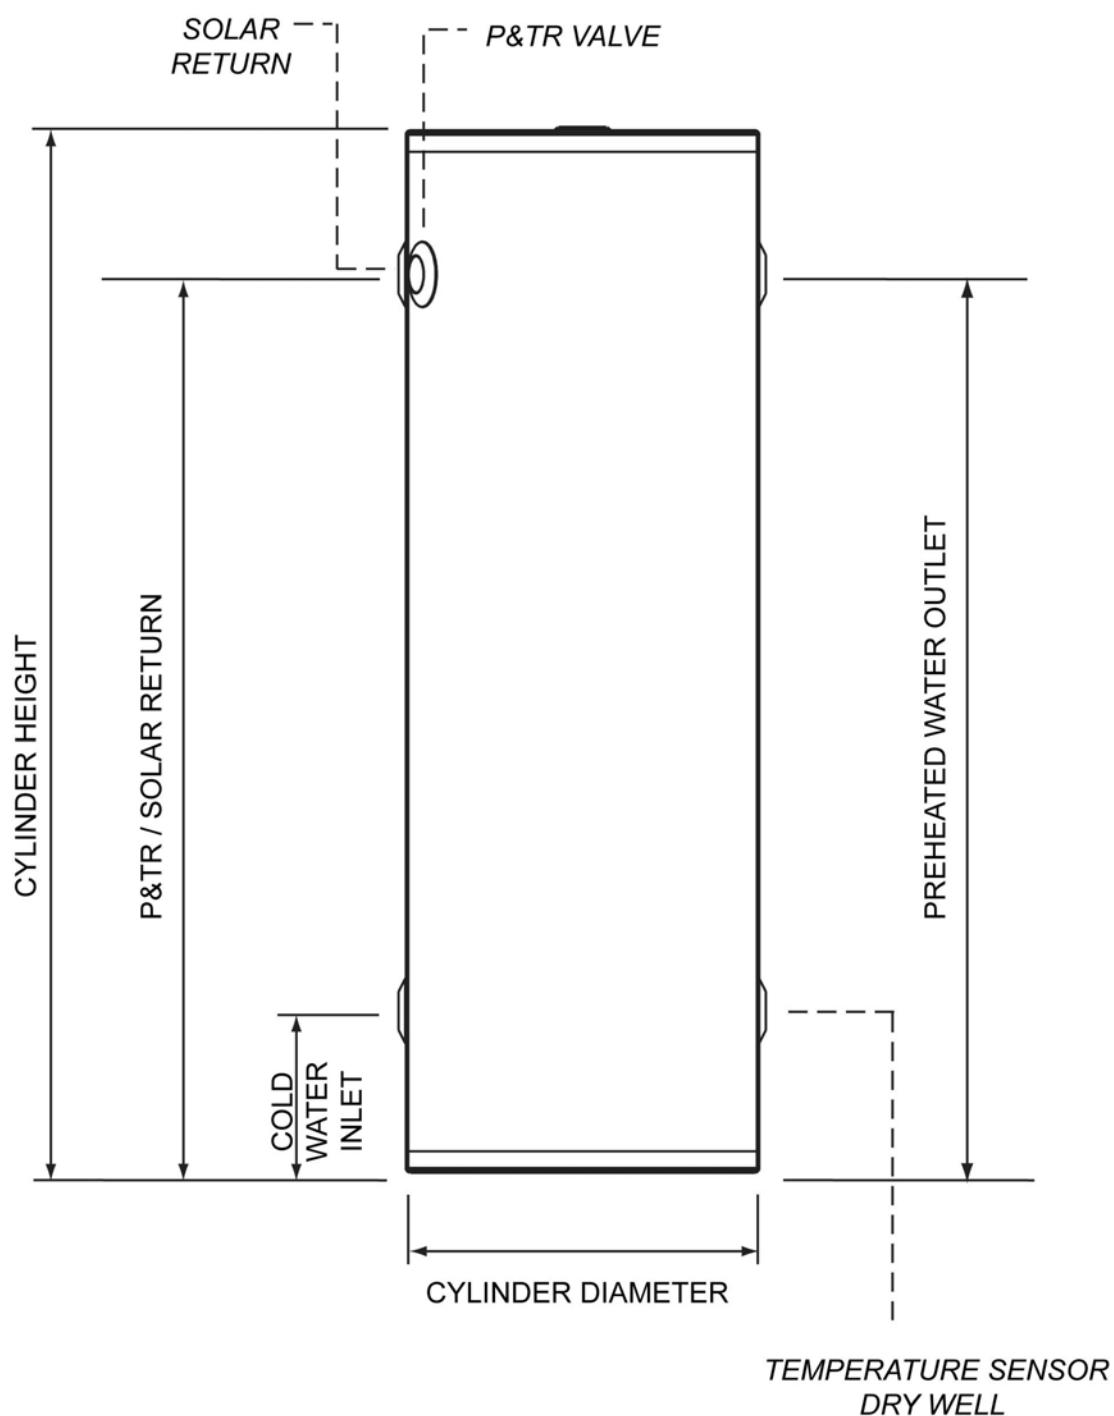

INSTALLATION OF STORAGE CYLINDERS

Stainless Steel Cylinders



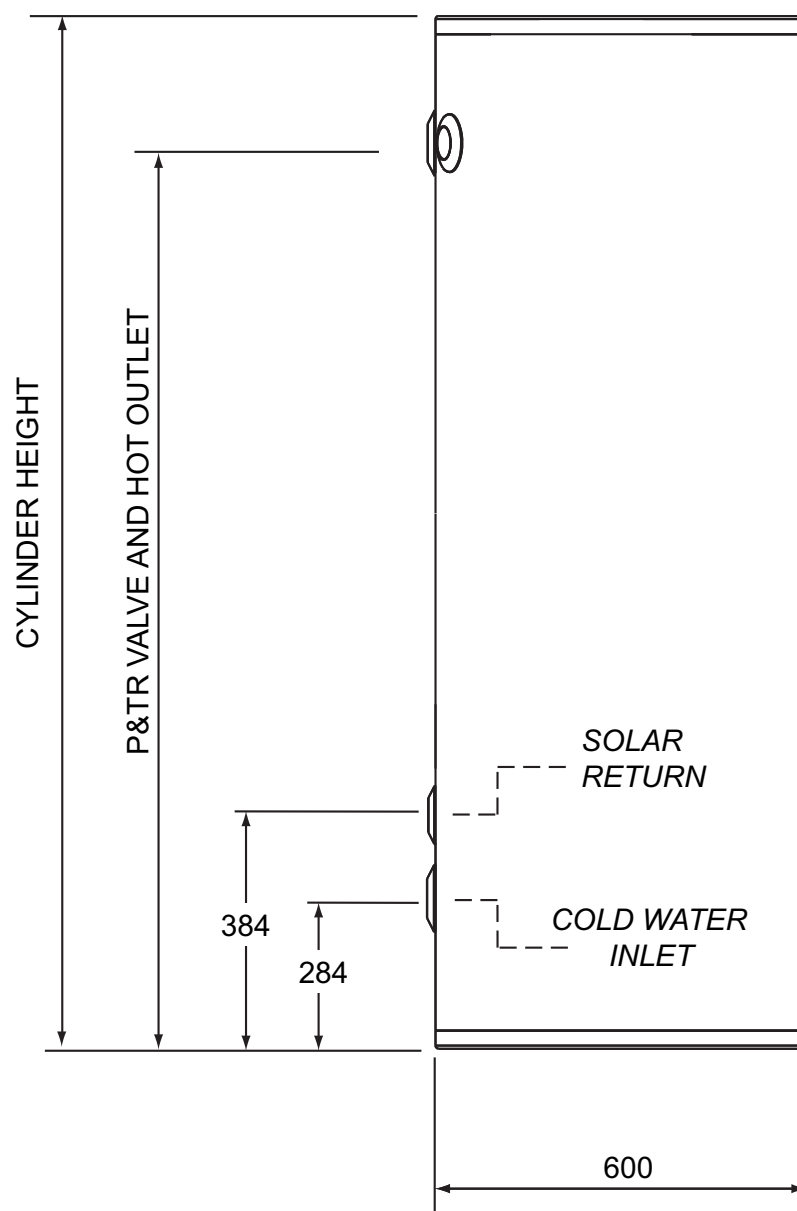





 








 



	DDS250	DDS315
Cylinder Height (mm)	1690	2080
PTR / Hot Water Outlet (mm)	1464	1854
Weight Empty (Kg)	56	68



Solar Return and PTR Connections: $\frac{3}{4}$ Rp
Hot and Cold Inlet Connectors: 1 $\frac{1}{4}$ Rp

INSTALLATION OF SOLAR CONTROLLER & PUMP

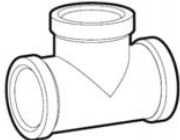COMPONENTS SUPPLIED IN DD SOLAR CONTROL KITS

DDSCP20	DDSCP25		DDSCP20	DDSCP25	
1	-	 <p>Control Box and Pump Assembly Includes USP20-60N pump, DDSC solar controller, power lead, hot and cold temperature sensor leads 39001732</p>	-	1	 <p>Control Box and Pump Assembly Includes USP25-80N pump, DDSC solar controller, power lead, hot and cold temperature sensor leads 39001733</p>
1	-	 <p>Pump – Grundfos 20-60N* DDUPS2060N</p>	-	1	 <p>Pump – Grundfos 25-80N* DDUPS2580N</p>
1	-	 <p>Union Valve Set 20 mm* 16601085</p>	-	1	 <p>Union Valve Set 25 mm* 16601080</p>
1	1	 <p>Demand Duo Solar Controller* 39001730</p>	1	1	 <p>Hot Sensor Lead (20 m)* 31002715</p>
1	1	 <p>Hot Sensor Sheath 10204714</p>	1	1	 <p>Cold Sensor Lead (2 m)* 31002710</p>
1	1	 <p>Air Bleed Valve 11007701</p>	1	1	 <p>Temperature Sensor Sheath 125 mm 10204719</p>
1	1	 <p>Adaptor R $\frac{3}{4}$ x Rp $\frac{1}{2}$ 19801004</p>	1	1	 <p>1$\frac{1}{4}$ nipple 17201046</p>
1	1	 <p>$\frac{3}{4}$ Kinco Olive 33001011</p>	1	1	 <p>T 1$\frac{1}{4}$ Rp 19001021</p>
1	1	 <p>$\frac{3}{4}$ Kinco Nut 16801018</p>			
1	1	 <p>Adaptor 32 to $\frac{3}{4}$ 17201047</p>	1	1	 <p>T $\frac{3}{4}$ Rp 19001011</p>
3	1	 <p>G3/4 (Comp) x R $\frac{3}{4}$ union 33201713</p>	-	2	 <p>G3/4 (Comp) x R 1 union 33201730</p>

* Part of Pump and Controller Assembly but shown separately for clarify.

INSTALLATION OF SOLAR CONTROLLERS

SOLAR CONTROLLER

The solar controller's function is to turn the solar pump on and off to enable the solar collectors to transfer heated water to the storage cylinder when there is capacity in the cylinder to store more energy and when the temperature difference between the cylinder and collector temperatures is suitable for energy collection.

A differential temperature between solar collector (hot sensor) and tank (cold sensor) of greater than 6°C pump causes the pump to be switched on. When differential falls to below 2°C the pump switches off.

When the cold temperature sensor reaches 65°C the pump is switched off. This prevent water that is too hot returning from the solar collectors to the storage cylinder and activating the P&TR valve.

The other function of the controller is to pump water through the collectors when there are frost conditions to prevent the collector from freezing. When the hot temperature sensor (in collector) drops below 4°C the pump activates to prevent freezing. When this temperature reaches 8°C the pump stops. This is an option is selected using the dipswitches. This function **MUST** be enabled for systems using E-Frost collectors to comply with warranty conditions.

ERROR DETECTION


The DDSC has in-build error detection that is connected to voltage free contacts. The voltage free contacts can either be open or closed on error detection.

ERROR DESCRIPTIONS

		Voltage Free Contacts (Dip Switch settings)	
LCD Display	Error Description	Open on Error	Closed on Error
E1	Fault with pump or panel sensor		
E2	Fault with one or both temperature sensors		
E3	Fault with pump		

It is possible for the LCD to display not only single errors but also multiple errors if present, additionally the LCD will also display the duration of the listed error(s). To clear errors listed, toggle top switch to the suspend state then switch back to the run state.

SOLAR CONTROLLER COMPONENTS

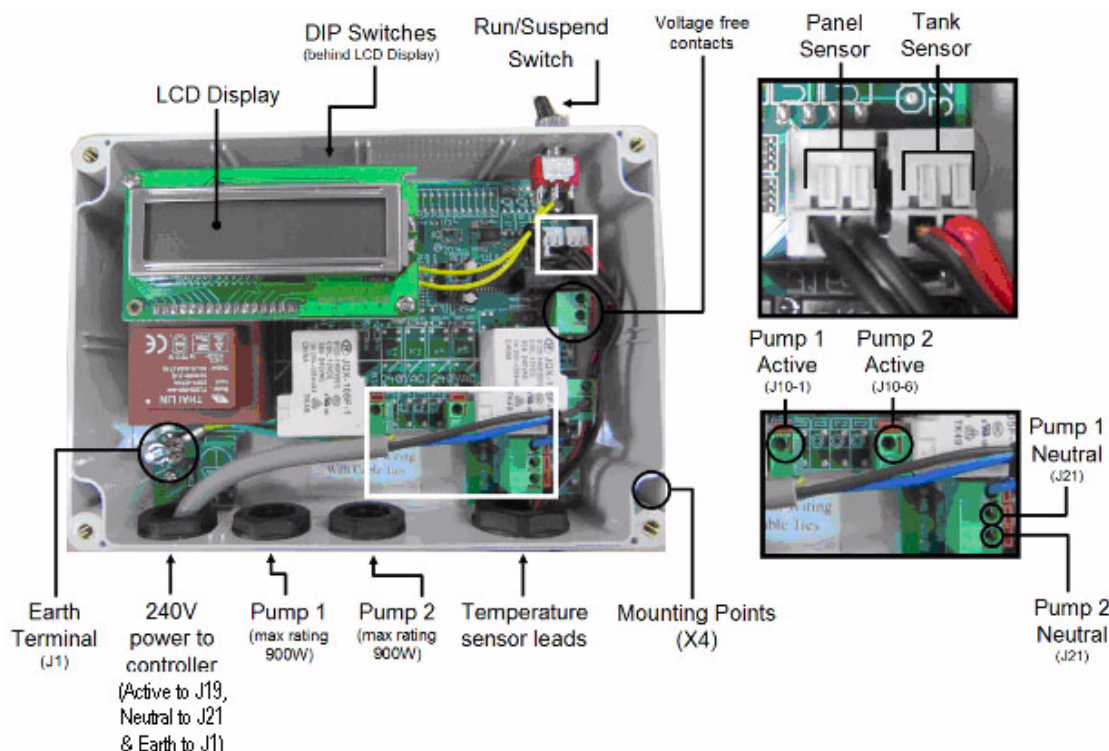

INSTALLATION OF SOLAR COLLECTORS

PUMP CONFIGURATION

The DDSC can be configured to run 4 pump operations, see following:

	Dip Switch Settings
Pump 1 (Left hand) only: Pump active wire to controller active (J10-1), Pump neutral wire to Controller neutral (J21). Pump earth wire to controller earth (J1)	
Pump 2 (Right hand) only: Pump active wire to controller active (J10-6), Pump neutral wire to Controller neutral (J21). Pump earth wire to controller earth (J1)	
Pumps 1 and 2 simultaneously: Pump 1 active wire to controller active (J10-1) Pump 1 neutral wire to controller (J21) Pump 1 earth wire to controller earth (J1) Pump 2 active wire to controller active (J10-6) Pump 2 neutral wire to controller neutral (J21) Pump 2 earth wire to controller earth (J1)	
Pump 1 and 2 Alternating: Pump 1 active wire to controller active (J10-1) Pump 1 neutral wire to controller neutral (J21) Pump 1 earth wire to controller earth (J1) Pump 2 active wire to controller active (J10-6) Pump 2 neutral wire to controller neutral (J21) Pump 2 earth wire to controller earth (J1)	

Legend: White indicates position of switch



Dip switches are upside down in controller as shown above, only Switches 7 & 8 are to be adjusted when setting pump configuration.

INSTALLATION OF SOLAR COLLECTORS

DIPSWITCH SETTINGS FOR FROST PROTECTION

Frost Protection must be enabled when using E-Frost Collectors. Only switch 4 is to be adjusted when setting frost protection. In frost areas it is advised to fit a non return valve on the outlet of the solar transfer pump or fit a heat trap on the solar return pipe.

Frost Protection Not Enabled



↑
Frost
Protection
OFF


Frost Protection Enabled




↑
Frost
Protection
ON

LOCATION OF COLD TEMPERATURE SENSORS

Stainless Steel Storage Cylinder

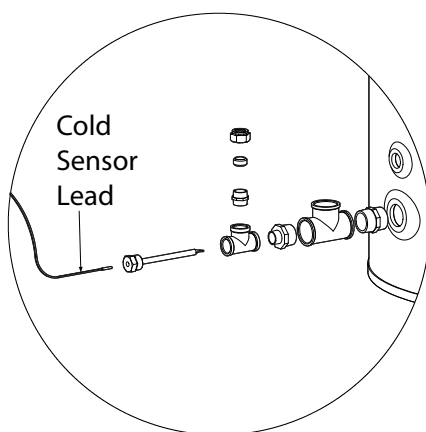

Vitreous Enamel Storage Cylinder

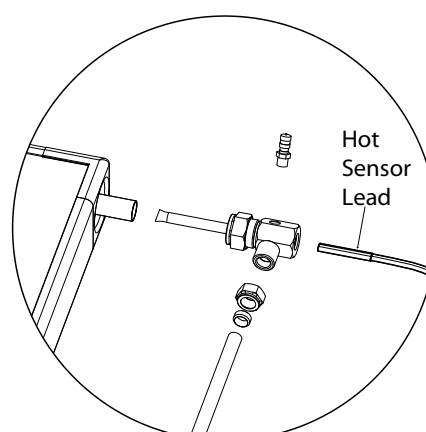

RESISTANCE OF TEMPERATURE SENSOR LEADS

Both temperature sensor leads have approximately the following resistances. This information can be used to verify performance of the leads. Should hot sensor lead be extended, use equivalent cable joined to existing connection point. **DO NOT** cut cable near thermistor, as it is specifically designed for high operating temperatures.



Use of lower quality cable can result in false temperature readings. To ensure correct operation, connect extra cable and test that complete assembly delivers correct resistance readings relative to temperature (as per table below). Incorrect temperature readings due to under performing cable extension can result in poor solar performance, lack of frost protection and void warranty.

Temperature (°C)	Resistance (Ohms)	Temperature (°C)	Resistance (Ohms)
0	32000	60	2000
10	19000	70	1100
20	12000	80	1000
30	8000	90	900
40	5000	100	700
50	3000		


INSTALLATION OF GAS BOOSTING SYSTEM

The installation of the Manifold Pack or Demand Duo must be carried out in accordance with instructions supplied with the system.

Piping connections to the Solar Preheat must be carried out as shown on the following pages.


The temperature setting of the gas boosters must be set to at least 60°C to comply with plumbing regulations

SOLAR PREHEAT WITH DEMAND DUO

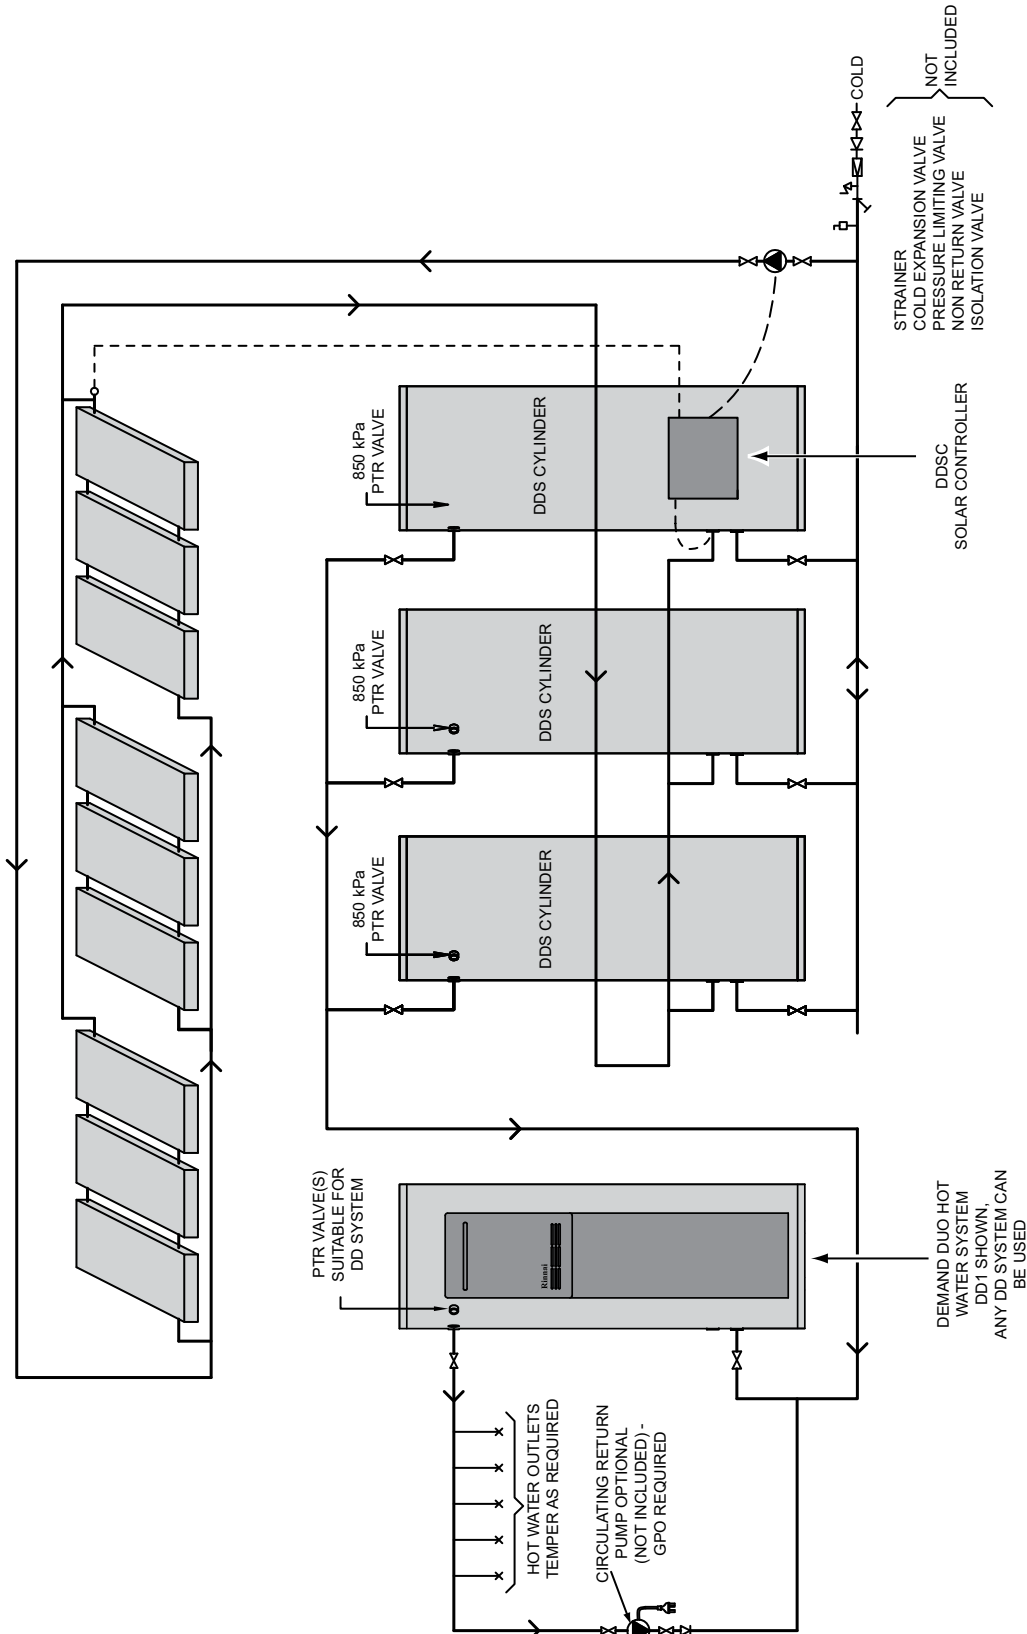


INSTALLATION OF GAS BOOSTING SYSTEM

SOLAR PREHEAT WITH MANIFOLD PACK

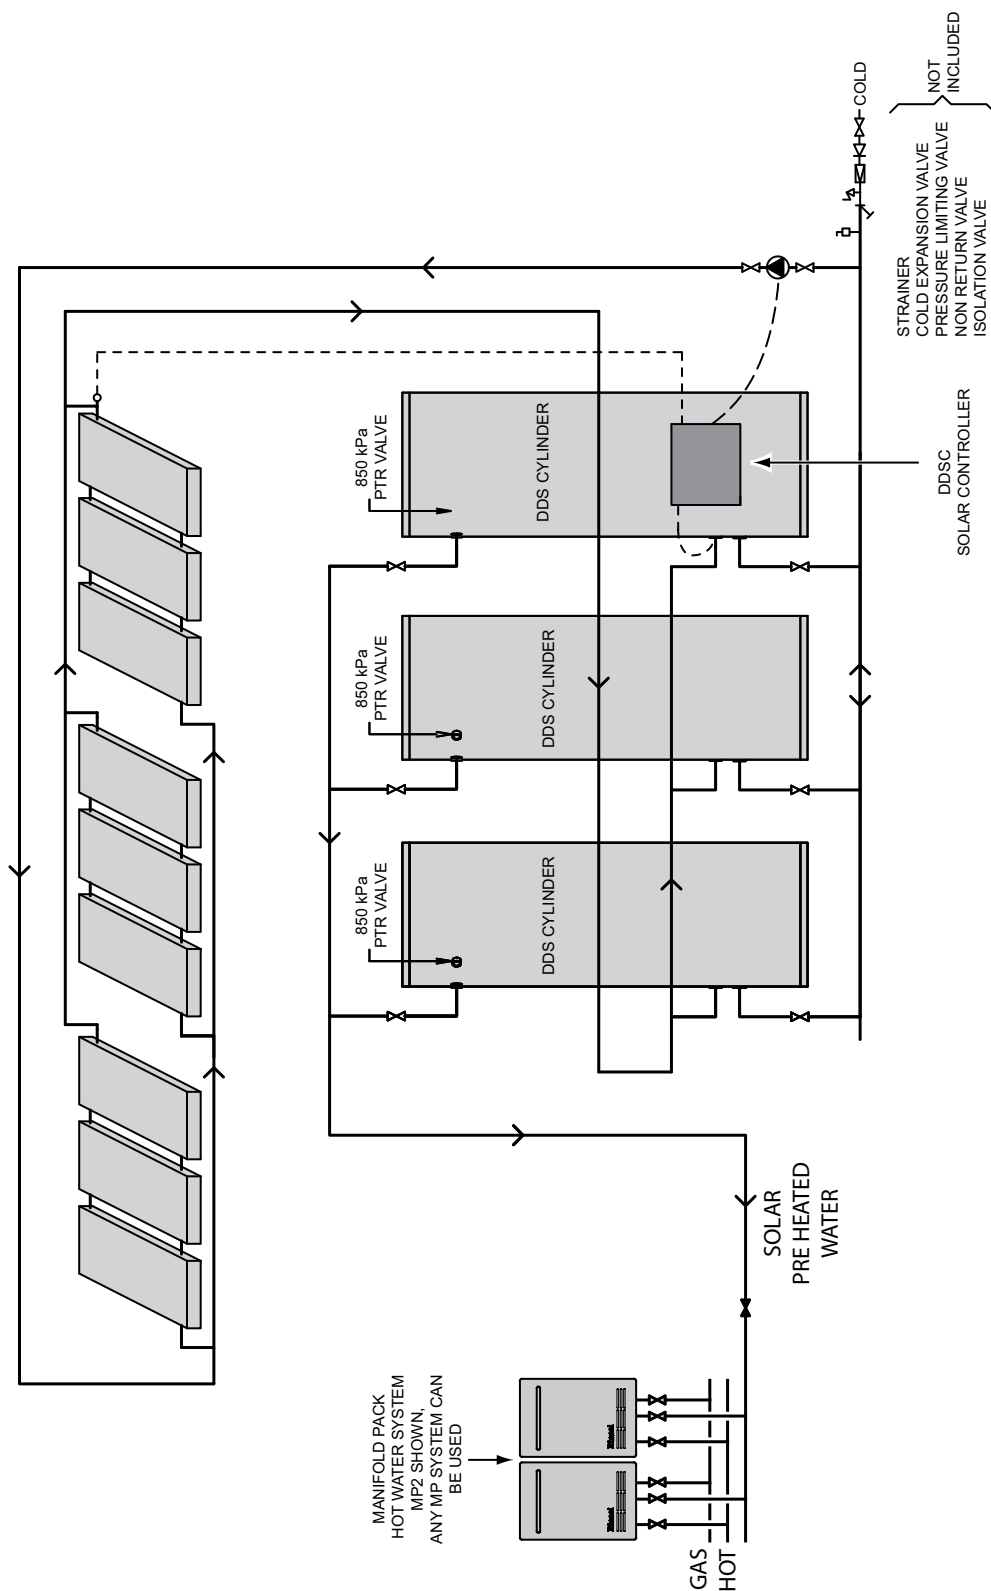

INSTALLATION OF GAS BOOSTING SYSTEM


SOLAR PREHEAT WITH DEMAND DUO AND WARM WATER VALVE

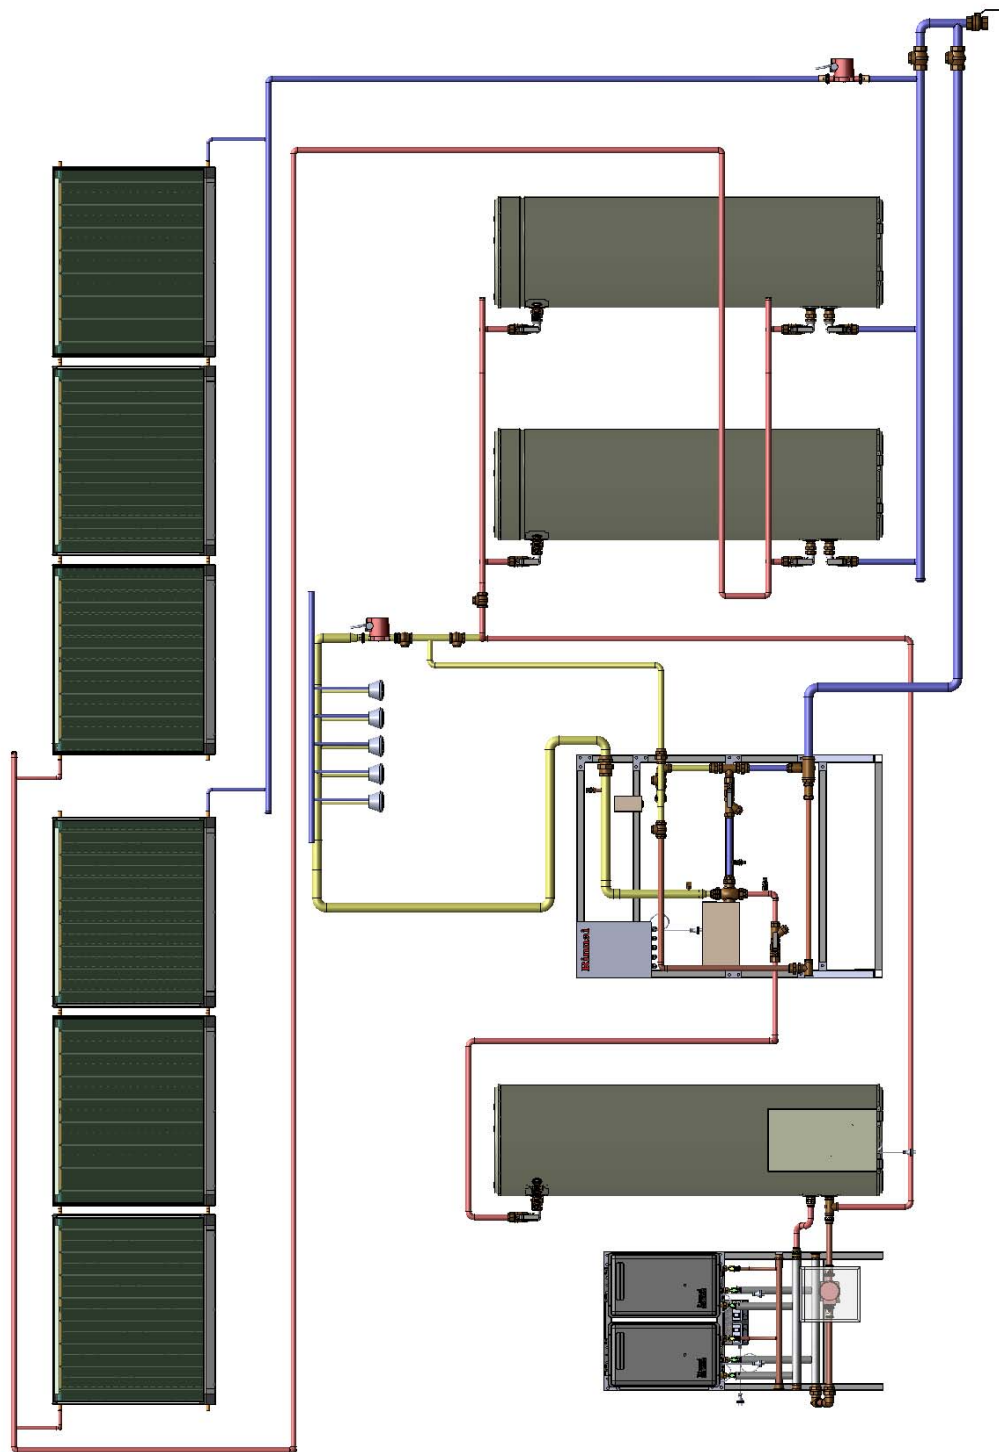

UV not shown with Warm Water Valve in above picture.

Refer to the instructions provided with the Warm Water Valve for details.

SAVE A SERVICE CALL

Problem	Cause	Remedy
Insufficient or no hot water	Booster heating not operating	Check to ensure the power supply to the gas booster system is 'ON'. Check gas is available and turned ON'. Close the hot tap and wait for 10 seconds and open it again. The hot tap must be opened enough to ensure that the flow rate is sufficient to cause the gas booster(s) to light. Check the isolation valve in the gas line is opened.
	OR Insufficient gas supply for gas boosted heating system	If there is gas supply to other appliances in the building, try lighting another gas appliance. Refer to your plumber to ensure the gas line has been purged of air after installation. Refer to the manual supplied with your boosting system for more information
	Excessive hot water consumption	Insufficient flow may occur if more outlets are in use at the same time than the system was designed for and exceeds the rated flow capacity of the gas booster. Have a plumber install water saving fixtures and/or flow control or pressure limiting valves to reduce consumption.
	Gas Booster Setting	The delivery temperature of the gas boosting system is normally 65°C. If the temperatures are higher than this, the flow of water through the gas booster will reduce and may result in insufficient flow rate. Ensure the boosting system is set for the temperature the system was designed for.
	PTR / Expansion Control valve discharging water continuously	It is normal and desirable that these valves allow a small quantity of water to be discharged during the heating cycle. If more than a bucket of water is discharged from an individual cylinder during a 24 hour period or the valve discharges continuously there may be another problem. If the valve dribbles continuously, try easing the valve gear for a few seconds as described under 'Regular Care'. This may dislodge any foreign matter and alleviate the problem. If the valve discharges at high flows, especially at night, it may be as a result of the water pressure exceeding the design pressure of the water heater. Ask your installer to fit a Pressure Limiting Valve (PLV).
 WARNING Never replace the PTR valve with one which has a higher pressure rating than is specified for your water heater. If the valve discharges hot water at high flows, (dumps) there may be a serious problem. Switch off the power supply to the Solar Controller and contact Rinnai.		
No water from the hot tap	Restriction in the hot tap or failure of the cold water supply to the water heater.	Check for water flow at the other taps and that the cold water isolation is fully open.
Gas Booster operating too frequently	Insufficient Sunlight - Collectors shaded	Reduced sunlight due to overcast weather in summer or low solar contribution in winter will result in an increased dependence on gas boosting. Higher gas use bills under these conditions, especially in winter, are normal.
	OR Solar System not operating	Ensure the trees or other objects are not shading onto the collector surface (Trim the trees or relocate the solar collector if the obstruction is permanent). Make sure the glass on the collector is not dirty. Check that positioning and alignment of solar collectors is in accordance with the section 'Location and alignment of solar collectors'. Make sure the glass on the collector is not dirty.
	Little or no water circulation in the solar 'flow and return' loop	There are numerous causes of little or no circulation in the solar 'flow and return circuit the circulation of water through the collectors. These causes must be investigated by a qualified person. Contact Rinnai.
Water flow fluctuations	High hot water usage	Higher than normal number of hot taps in use at the same time may cause a decrease in the hot water flow from the taps.
Water Hammer	System plumbing	Have a plumber check clipping of hot and cold water pipework and install a pressure limiting valve and water hammer arrestor as required.

Rinnai

Rinnai Australia Pty. Ltd. ABN 74 005 138 769

Head Office

10-11 Walker Street,
Braeside, Victoria 3195
P.O. Box 460
Tel: (03) 9271 6625
Fax: (03) 9271 6622

Rinnai has a Service and Spare Parts network with personnel who are fully trained and equipped to give the best service on your Rinnai appliance. If your appliance requires a service, please call our National Help Line.

Internet: www.equinoxsolar.com.au

General: www.rinnai.com.au

E-Mail: enquiry@rinnai.com.au

National Help Line

Tel: 1300 555 545*

Fax: 1300 555 655*

**Cost of a local call Higher from mobile or public phones.*

Hot Water Service Line

Tel: 1800 000 340

15401005