


Rinnai SINGLE SECURITY CAGE (CAGE 01) INSTALLATION INSTRUCTIONS

The 'Cage 01' is suitable for all single, externally installed Rinnai Infinities. Models **Infinity16** (REU V 1616W-AK), **Infinity 18** (REU-V 2018W-AK), **Infinity 20** (REU-V 2020W-AK), **Infinity 26** (REU V2626W-AK), **Infinity 32** (REU V3232W-AK), **HD200E** (REU V2632WC-AK) and **HD250E** (REU V3232WC-AK).

1. Fix the Rinnai Infinity in place.
2. Hold security cage over the Infinity making sure it clears all pipe work to determine it's correct location.
3. Mark the position of the bottom bracket including the two fixing holes that secure the bracket. The bottom-securing bracket has two pivot pins. This bracket is flat and can be slid behind the pipes connecting to the Infinity.
4. The top-securing bracket has one pivot pin on the right hand side. Secure the bottom bracket with two Hilti Tap-ins provided as follows:
 - a. Drill 2 x 6mm holes to a depth of 41mm
 - b. Insert the Tap-ins, knocking the pin in to be flush with the head.
5. Locate cage over bottom bracket pins. Slide top bracket behind cage and with pivot pin on the right hand side and facing upwards. Slide bracket upwards until the pivot pin locates through top cage brackets.

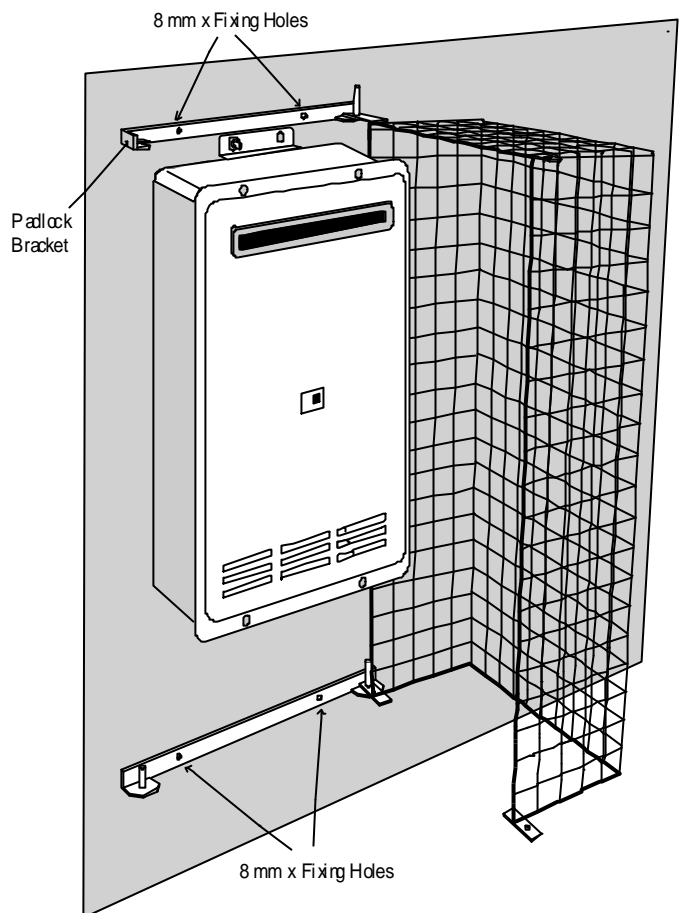

6. Mark the position of the top bracket, including the two fixing holes that secure the bracket and remove security cage.
7. The pivot pin on the right hand side of the bracket should point upwards.
8. Secure the top bracket with two Hilti Tap-ins provided as follows:
 - a. Drill 2 x 6mm holes to a depth of 41mm
 - b. Insert the tap-ins, knocking the pin in to be flush with the head.

Note: The head of the fixing device must not extend more than 10mm from the bracket or the cage will not fully close.

Relocate cage over pivot pins and lock in place with a suitable padlock through the top left padlock hole.

CONTACT POINTS

Rinnai
AUSTRALIA PTY. LTD

ACN 005 138 769
ABN 74 005 138 769

Internet: www.rinnai.com.au
E-mail: enquiry@rinnai.com.au

Head Office, Australia

10-11 Walker Street, Braeside, VIC 3195
Tel: (03) 9271 6625 Fax: (03) 9271 6622

State Offices

New South Wales

62 Elizabeth Street, Wetherill Park NSW 2164

Western Australia

18 Belgravia Street, Belmont, WA 6104

Product Sales

Victoria / South Australia / Northern Territory / Tasmania
New South Wales / Queensland
Western Australia

Tel: 1300 366 388 Fax: (03) 9271 6611
Tel: (02) 9609 2888 Fax: (02) 9609 5260
Tel: (08) 9479 9479 Fax: (08) 9277 2531

Spare Parts

National

Tel: 1300 366 388 Fax: (03) 9271 6611

HelpLine

National

Tel: 1300 366 388 Fax: (03) 9271 6611

Product Service

Victoria / South Australia / Northern Territory / Tasmania
New South Wales / Queensland
Western Australia

Tel: 1300 366 388 Fax: (03) 9271 6611
Tel: (02) 9609 2600 Fax: (02) 9729 0467
Tel: (08) 9479 9479 Fax: (08) 9277 2531

Emergency Hot Water

Victoria
New South Wales
South Australia
Western Australia
Queensland

1800 632 386
(02) 9729 0468
(08) 8345 5185
(08) 9324 4145
1800 255 655

Rinnai
NEW ZEALAND LTD.

Internet: www.rinnai.co.nz
E-mail: sales@rinnai.co.nz

Head Office, New Zealand

691 Mt. Albert Road, Royal Oak, Auckland
P O Box 24-068

Tel: (09) 625 4285 Fax: (09) 624 3018

24 hr Service
Tel: 0800 746624 (0800 Rinnai)

Created 2002.August