

# Rinnai

## PIPE COVER PCD01


To suit Rinnai water heater model:

**REU-VM2630WD  
INFINITY 26 Plus**

### PIPE COVER PCD01 COMPONENTS


The PCD01 pipe cover kit for Rinnai REU-VM2630WD - INFINITY 26 Plus model water heaters comes complete with the following items:

Part No.	Description	Quantity
①	Top Frame	1
②	Bottom Frame	2
③	Left Panel	1
④	Right Panel	1
⑤	Front Panel	1
⑥	L Bracket	2
⑦	Plastic Retaining Clip	2
⑧	Screw M4x8	6
⑨	Plastic Washer M4	6
⑩	Hex Head Screw M5x8	2
⑪	Wall Anchor	2
⑫	Screw $\phi 4.8 \times 32$	2

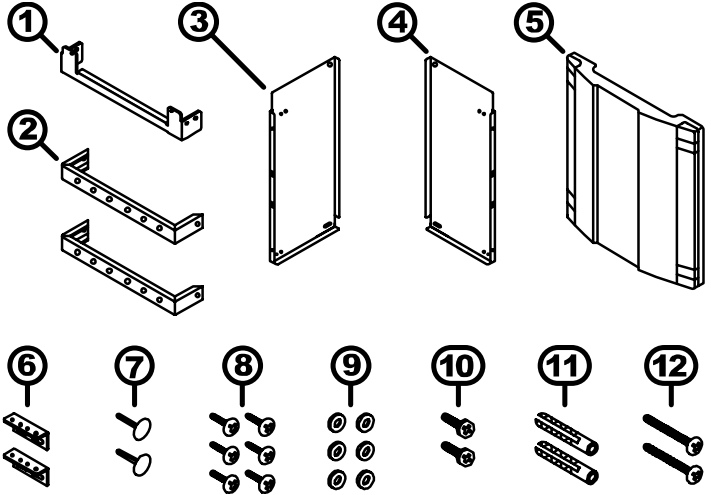


#### i INITIAL ASSEMBLY

1. Assemble the top frame ① to the left ③ and right ④ panels with the plastic retaining clips ⑦. Once in place secure these parts with screws ⑧ and plastic washers ⑨.
2. Secure the two bottom frames ② to the left ③ and right ④ panels with screws ⑧ and plastic washers ⑨.

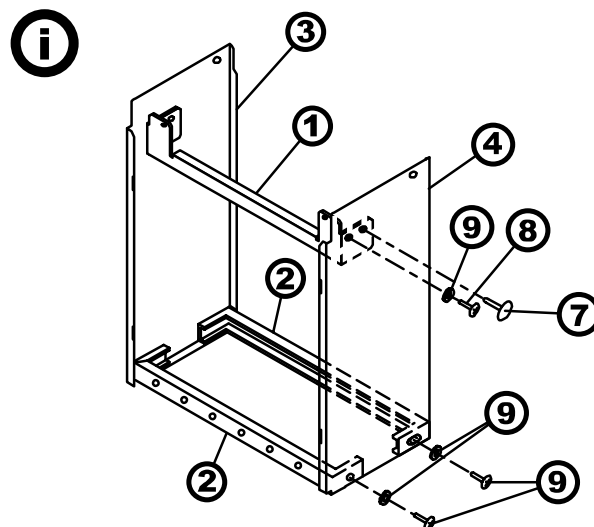


#### ii APPLIANCE PREPARATION

3. Remove the mounting screws A and B from the bottom and sides of the appliance.
4. Install the two L brackets ⑥ to the bottom of the appliance with the screws A removed in step 3, ensuring the tab of the L brackets face to the rear of the appliance.

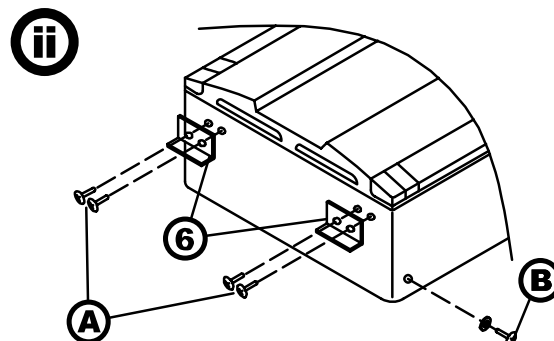



### iii PIPE COVER INSTALLATION

5. Temporarily fit the pipe cover assembly onto the bottom of the appliance, using the side mounting holes with the screws (B) that were removed from the appliance sides in step 3. Do not fully re-tighten these screws as they will be removed again in step 8.
6. Loosen the screws of the 'rear' bottom frame (2) and move the frame into its final position. Once satisfied re-tighten screws.
7. Select two suitable fixing points through the 'rear' of the bottom frame (2) and mark off their position on the wall.
8. Remove the pipe cover assembly from the appliance and drill two holes in the wall as marked. If using the wall anchors (11) supplied a 5mm diameter hole to the depth of 25mm is required.
9. Gently tap the wall anchors (11) into the drilled holes until flush with the wall surface.
10. Refit and secure the pipe cover assembly onto the bottom of the appliance using the side mounting holes and screws (B). Secure the top frame (1) of the pipe cover assembly to the appliance via the L brackets (6) with the two hex head screws (10).
11. Secure the pipe cover to the wall through the 'rear' bottom frame (2) with two screws (12).

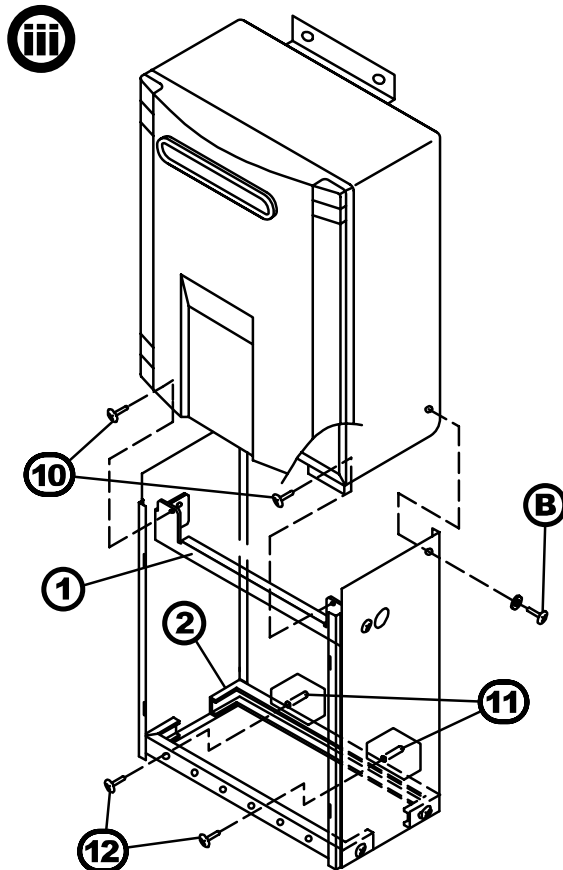

### iv FITTING FRONT PANEL

12. Attach the front panel (5) to the pipe cover assembly by inserting the four tab hooks (C) into the slots (D) of the left (3) and right (4) panels (see tab hook and slot detail below).

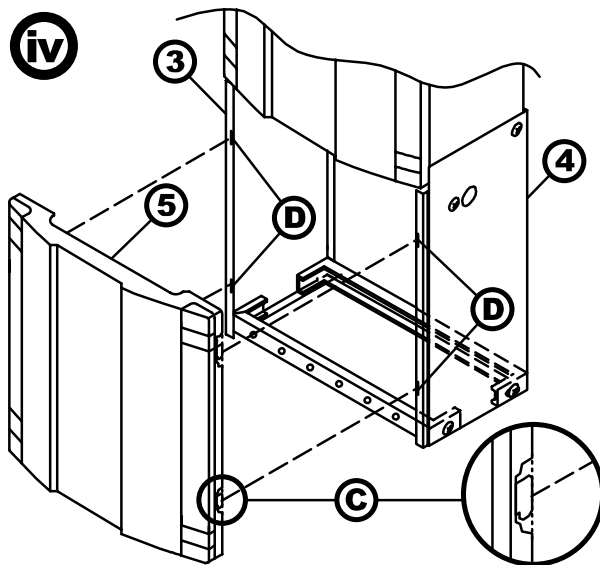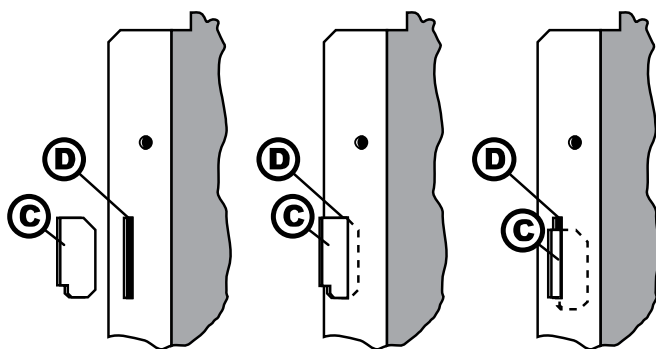

**An approved weatherproof electrical GPO can be located inside the pipe cover. Installation of the GPO must comply with AS 3000 Wiring Rules.**

**Rinnai Australia Pty. Ltd.** ABN 74 005 138 769

#### Head Office

10-11 Walker Street,  
Braeside, Victoria 3195  
P.O. Box 460

Tel: (03) 9271 6625  
Fax: (03) 9271 6622

Internet: [www.rinnai.com.au](http://www.rinnai.com.au) E-mail: [enquiry@rinnai.com.au](mailto:enquiry@rinnai.com.au)

#### National Help Lines

##### Spare Parts & Technical Info

Tel: 1300 366 388\*  
Fax: 1300 300 141\*

\*Cost of a local call Higher from mobile or public phones.

Hot Water Service Line Tel: 1800 000 340