




〈RHFE-557FTR〉

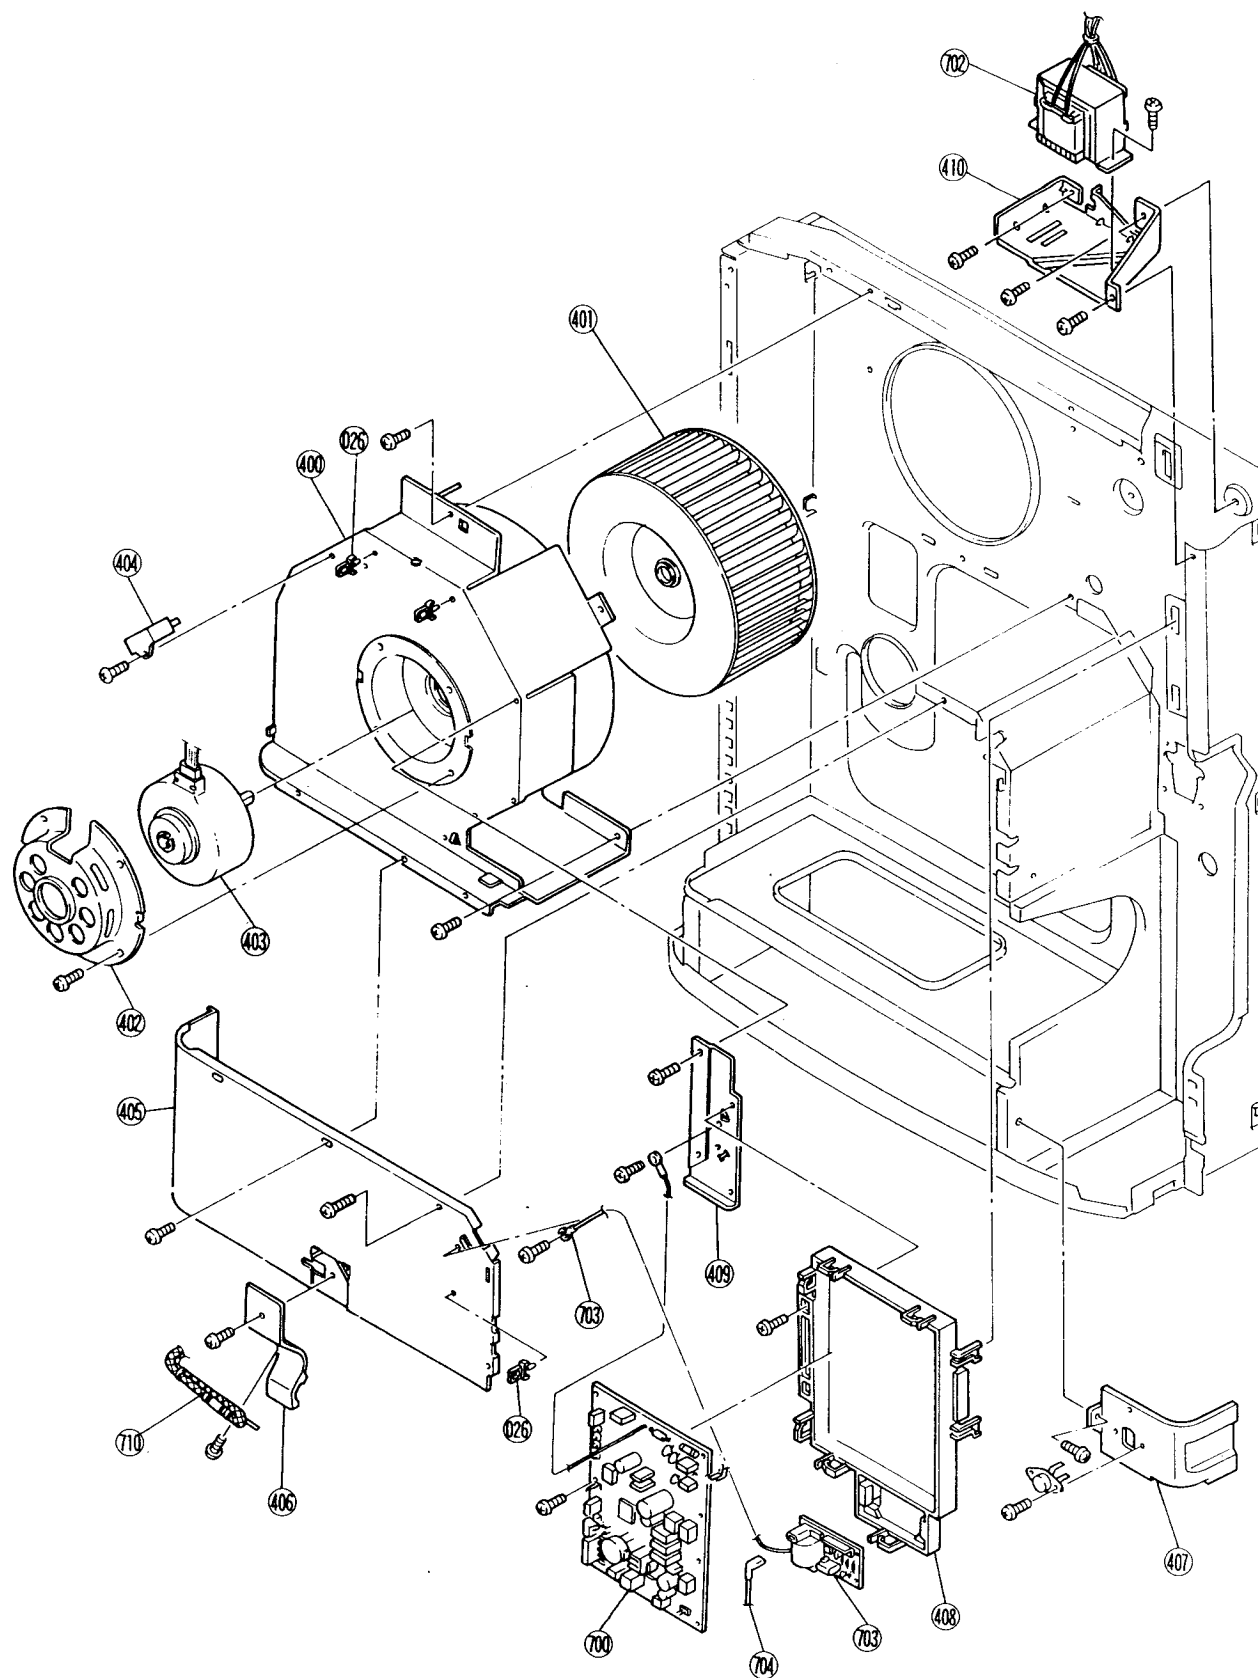


〈RHFE-557FTR〉

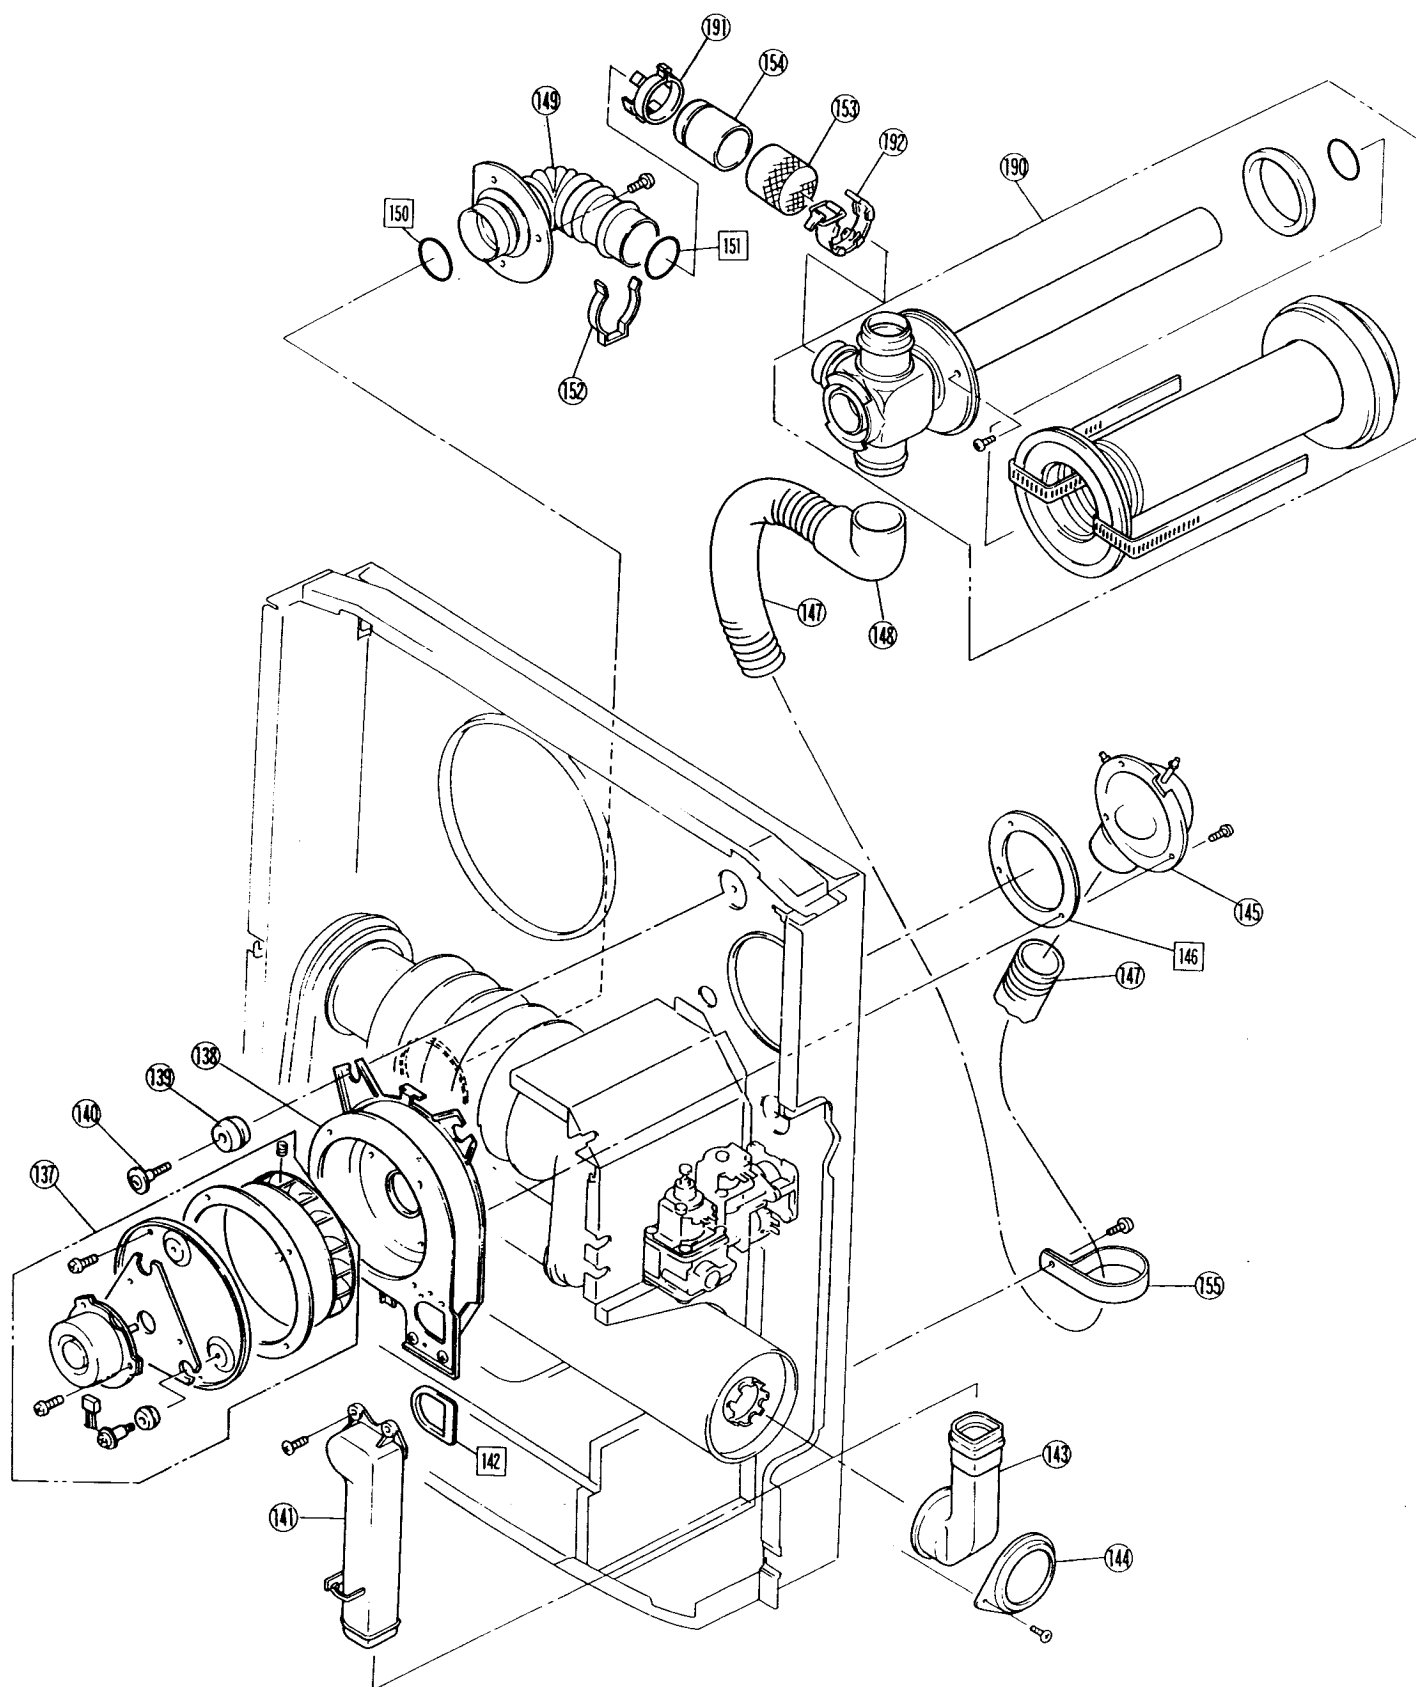


〈RHFE-557FTR〉

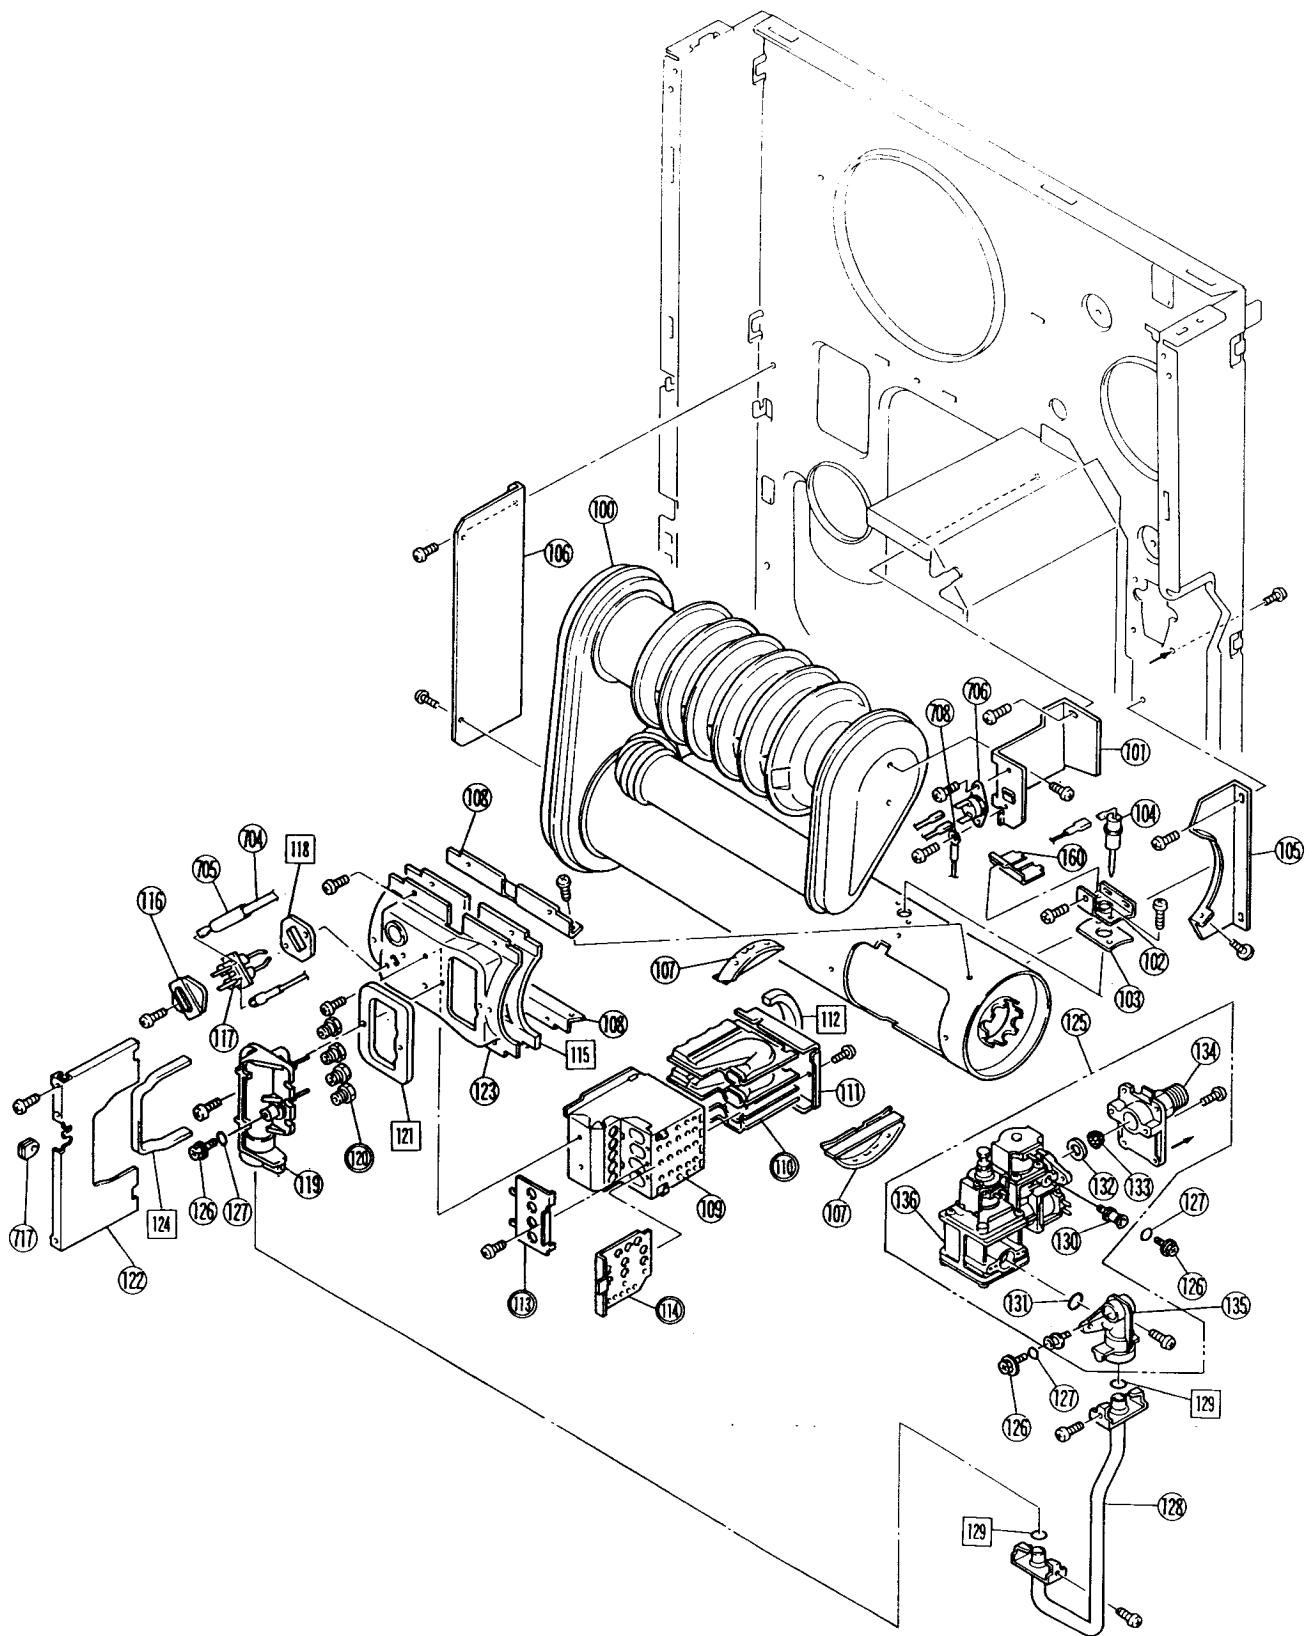

〈RHFE-557FTR〉

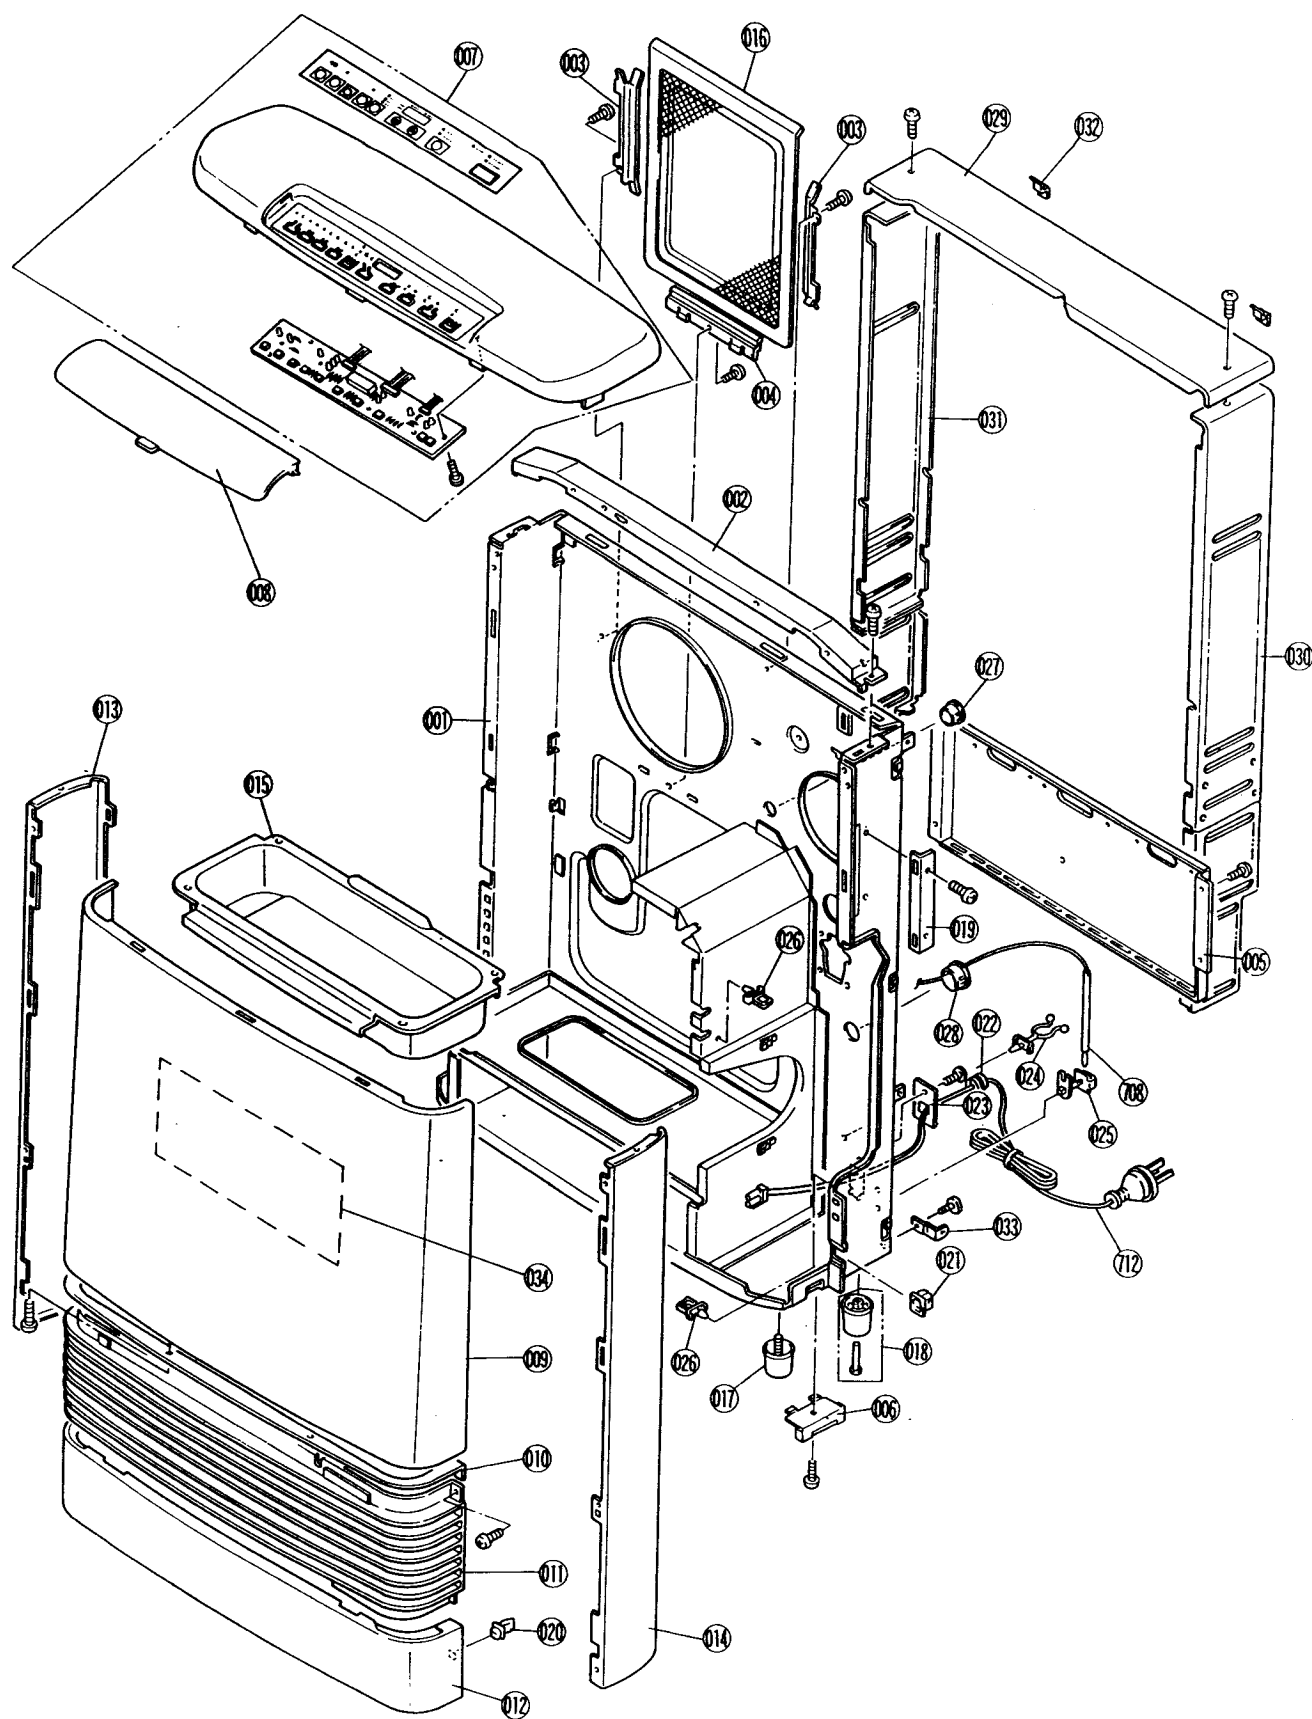

〈RHFE-557FTR〉

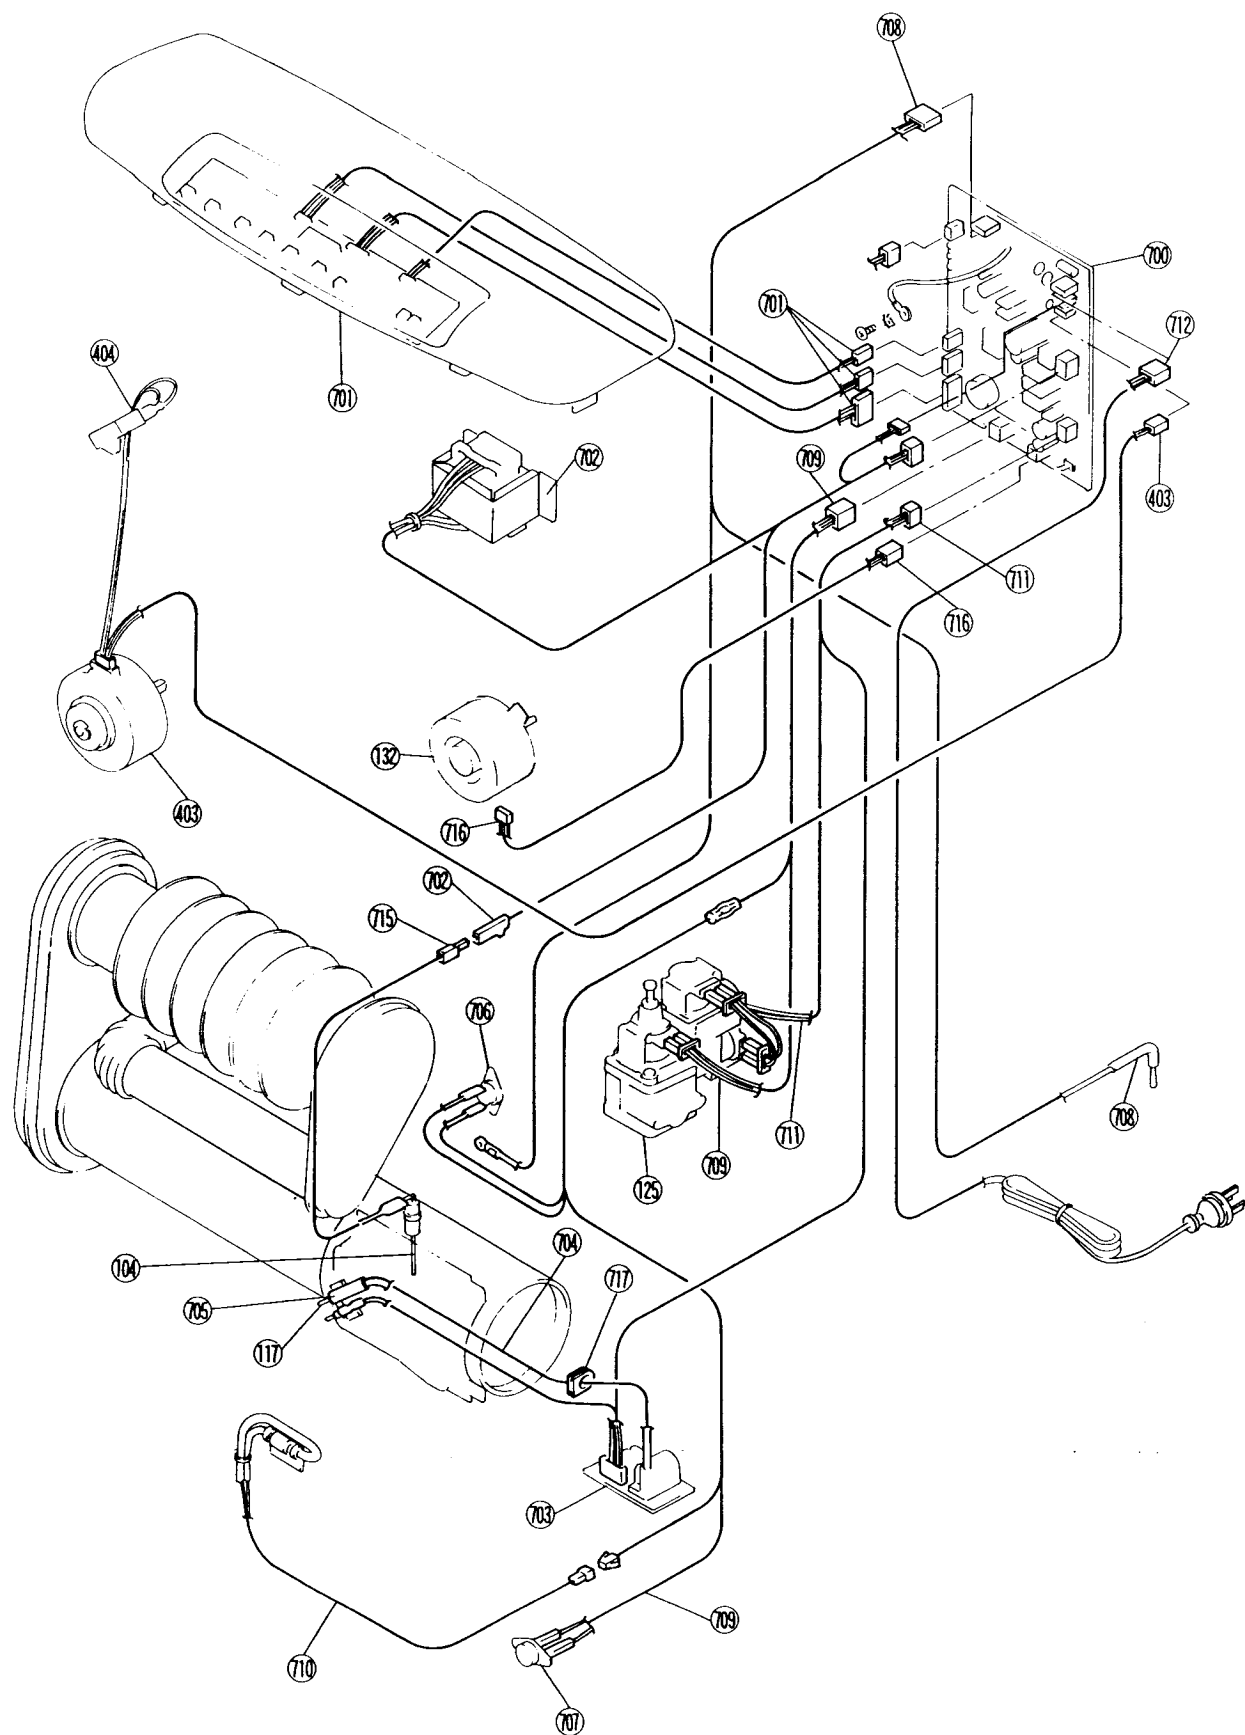

RHFE-557FTR

No.	Part Name	RA Part No.	11 Digit Code	QTY
1	REAR PANEL A ASSEMBLY	90101825	004-595-000	1
2	TOP PLATE REINFORCE		044-028-000	1
3	FILTER SUPPORT SIDE	90102161	538-059-000	2
4	FILTER BKT BOTTOM 308/557	90102179	538-064-000	1
5	REAR PANEL INSULATION		030-022000	1
6	FLOOR FIXING BRACKET		537-677-000	2
7	CONTROL PANEL ASSY 0C	90139148	001-603-000	1
7	PANEL TOP & PCB SV 557	90199150	001-0461000	1
8	LID CONTROL SV 557	90191917	035-1525000	1
8	CONTROL LID	90185422	035-0031000	1
9	PANEL FRONT 0 557FTR	90101544	019-853-000	1
9	PANEL FRONT SV 557	90194290	019-3757000	1
10	LOUVRE D		046-195-000	1
11	LOUVRE BOTTOM 0 557	90101874	095-140-000	1
11	LOUVRE BOTTOM SV 557	90190177	095-239-000	1
12	PANEL KICK 0C 557	90102047	098-469-000	1
12	PANEL KICK SV 557	90194272	098-216600	1
13	PANEL SIDE L0C 557	90101569	003-256-000	1
13	PANEL SIDE LH SV 557	90196775	003-925-L00	1
14	PANEL SIDE RH SV 557	90191620	003-925-R00	1
14	PANEL SIDE R0C 557	90101619	003-257-000	1
15	HUMIDIFIER TRAY	90112830	078-018-000	1
16	AIR FILTER ASSY 0C 557	90102054	017-289-000	1
17	FOOT FRONT 557 556 553	90165663	015-140-000	2
18	FOOT REAR 557 556 553	90165655	015-141-000	2
20	PANEL KICK LATCH 556 557	90175589	502-242-000	1
21	LATCH	90194218	512-419-000	1
22	CORD BUSH 151 212 417 506	90177106	194-098-000	1
23	POWER CORD FIXING BRKT	90177114	538-180-000	1
24	CABLE CLIP (0248)		504-024-000	1
25	THERMISTOR HOLDER ALL	90165267	537-179-000	1
25	THERMISTOR HOLDER USE	90167263	537-179-000	1
26	WIRE SADDLE 417 506 516	90176728	514-020-000	4
27	BUSH		194-112-000	1
28	BUSH		194-119-000	1
29	SPACER TOP 0C 557FTR	90101981	034-607-000	1
29	SPACER TOP SV 557	90191282	034-0042000	1

RHFE-557FTR

No.	Part Name	RA Part No.	11 Digit Code	QTY
30	SPACER SIDE RH SV 557	90191285	034-004-300	1
30	SPACER SIDE R0C 557FTR	90101990	034-608-000	1
30	SPACER SIDE RH SV 557	90191285	034-0043000	1
31	SPACER SIDE LH SV 557	90191287	034-0044000	1
31	SPACER SIDE L0C 557FTR	90101999	034-609-000	1
31	SPACER SIDE LH SV 557	90191287	034-0044000	1
32	CLIP WALL SPACER	90147471	504-018-000	2
33	BACK COVER FIXING PLATE		537-678-000	2
34	UTYL-RUBBER VIBRATION ABS		540-084-000	1
100	HEAT EXCHANGE ASSY RHF557	90131731	108-168-000	1
101	OHS FIXING PLATE		537-422-000	1
102	FLAME ROD BRACKET		537-849-000	1
103	FLAME ROD GASKET B		580-458-000	1
104	FLAME ROD RHF557 556 1001	90142803	230-017-000	1
105	CHAMBER BRACKET		537-673-000	1
106	HEAT EXCHANGER BRACKET		537-735-000	1
107	SEAL PLATE ASSEMBLY		526-113-000	1
108	FRANGE		190-149-000	1
109	BURNER BOX		527-217-000	1
110	BURNER ASSY NG/LPG	90170630	157-063-LPG	1
111	BURNER SUPPORT REAR ASSEM		538-276-000	1
112	BURNER BOX GASKET RHF556	90175662	580-641-000	1
115	FIXING BRKT GASK	90175670	580-334-000	1
116	ELECTRODE RETAINER		506-145-000	1
117	ELECTRODE RHF556 557	90175696	202-132-000	1
118	ELECTRODE GASKET RHF553	90173105	580-176-000	1
119	INJ MANIFOLD 431 556	90178542	101-355-000	1
121	MANIFOLD GASKET B		580-392-000	1
122	WARM AIR SEAL PLATE		526-149-000	1
123	BURNER BOX FIXING PLATE		537-674-000	1
124	HEAT EX GASKET RHF556	90175563	580-640-000	1
125	GAS CONTROL NG/LPG	90175704	114-409-000	1
126	PRESSURE POINT SCREW	90195157	501-275-005	3
127	O-RING (S-4)	90195165	520-300-010	3
128	CONNECTING TUBE ASSEMBLY		102-936-000	1
129	INLET TUBE O RING	90165523	520-024-010	2
130	PRESSURE POINT		135-014-000	1

RHFE-557FTR

No.	Part Name	RA Part No.	11 Digit Code	QTY
131	O RING (S14) 506 516 318	90176611	520-325-000	1
132	GASKET 417	90176637	510-519-000	1
134	GAS INLET FLANGE 553 556	90165515	106-301-000	1
135	MOD VALVE MANIFOLD	90165549	106-504-000	1
136	MAGNET VALVE ASSEMBLY	90183682	114-358-000	1
137	COMBUSTION FAN ASSY	90142670	040-229-000	1
138	COMBUSTION FAN CASING ASS		019-0806000	1
139	CUSHION RUBBER RCE 560PTR	90183195	540-051-000	6
140	S SCREW (MOTOR)		501-303-000	6
141	COMB CHAMBER CONN TUBE	90131764	322-147-000	1
142	CONNECTING TUBE GASKET		580-457-000	1
143	COMB CHAMBER CONN ELBOW	90133968	322-148-000	1
144	CONNECTING TUBE RETAINER		538-062-000	1
145	HOUSING RHF556 557 553	90123043	094-010-000	1
146	INLET SEAL HOUSING RHF557	90123050	510-506-000	1
147	INLET HOSE RHF556 557 551	90122961	513-126-000	1
148	RUBBER INLET ELBOW RHF557	90122953	191-051-000	1
149	FLUE EXHAUST ELBOW ASSY	90122950	191-206-000	1
150	O RING 35.5MM FLUE ELBOW	90122946	520-160-000	1
151	O RING 34MM FLUE EXTENS	90122920	520-142-005	1
152	INSULATION CLIP RHF557	90165374	552-075-000	1
153	FLUE OUT COVER RHF556	90165382	034-457-000	1
154	FLUE EXH SLIDE TUBE	90122958	554-162-000	1
155	HOSE CLIP RHF556	90170341	538-065-000	2
160	FLAME ROD BRACKET		538-277-000	1
160	LONG WALL TOP (B FIUE)		055-626-000	1
160	STANDARD WALL TOP		055-553-000	1
191	FLUE LOCK STOPPER	90165366	512-326-000	1
192	SNAP STOPPER	90165358	512-327-000	1
400	CONVECTION FAN CASING ASS		019-0900000	1
401	CONVECTION FAN BLADE	90185968	040-185-000	1
402	MOTOR BRACKET A		537-850-000	1
403	CONVECTION FAN RHF557	90143116	222-343-000	1
405	INSULATING PLATE ASSEMBLY		030-843-000	1
406	TF FIXING PLATE		537-851-000	1
407	OVERHEAT SWITCH NO.2 FIXI		537-853-000	1
409	UNIT BRACKET A		538-278-000	1

RHFE-557FTR

No.	Part Name	RA Part No.	11 Digit Code	QTY
410	TRANSFORMER FIXING PLATE		537-852-000	1
700	PCB MAIN 557	90125337	200-717-000	1
702	TRANSFORMER MAIN RHF557	90138546	224-265-000	1
703	SPARKER UNIT RHF556 557	90175829	262-028-000	1
704	HIGH TENTION CORD		203-219-000	1
705	ELECTRODE SLEEVE		513-109-000	1
706	OHS 90C RHF431 556 557	90178575	234-506-000	1
707	OHS 130C RHF431 556	90178567	234-505-000	1
708	O/HEAT THERMISTOR 308FTR Does not apply to this model	90177502	233-119-000	1
708	O/HEAT THERMISTOR 557FTR	90175787		1
709	MAIN HARNESS ASSEMBLY		290-077-000	1
710	TF HARNESS		290-871-000	1
711	SV HARNESS		290-075-000	1
712	POWER CORD ASSEMBLY	90185786	206-177-000	1
715	FLAME ROD LEAD B		209-340-000	1
716	MOTOR HARNESS A		290-069-000	1
717	CORD GASKET B		580-149-000	1
804	WARNING LABEL ELECTRIC	90176017	602-236-000	1
806	WARNING LABEL	90173121	602-707-000	1
807	SAVE-ENERGY LABEL		602-717-000	1
808	WATER LEVEL LABEL B		602-654-000	1
810	PACKING ASSY FOR OUTDOOR		510-0003000	1
811	REMOTE CONTROL UNIT	90175555	123-065-000	1